การติดตั้งไดร์เวอร์พรินเตอร์บน Windows Vista ค่ะ

ปกติในวินโดวส์วิสต้าจะมีไดร์เวอร์ของเครื่องพิมพ์ดอทเมตริกช์ และอิงค์เจ็ต รุ่นเก่าๆ เกือบ ทุกรุ่น โดยวีธีการติดตั้งไดร์เวอร์จากวินโดวส์วิสต้า สามารถทำได้ดังนี้

- 1. กด Start เข้า Control Panel
- 2. คลิกเลือก Printer
- 3. กดปุ่ม Add Printer ดังรูป



4. เลือก Add a local printer จากนั้นกดปุ่ม Next ดังรูป



5. เลือก Port ให้ตรงกับการใช้งาน จากนั้นกดปุ่ม Next

Choose a printer po	ort
A printer port is a type of co printer.	nnection that allows your computer to exchange information with a
Create a new port: Type of port:	LPT1: (Printer Port) LPT2: (Printer Port) LPT3: (Printer Port) COM1: (Serial Port) COM2: (Serial Port) COM4: (Serial Port) COM4: (Serial Port) FILE: (Print to File) USB001 (Virtual printer port for USB) USB002 (Virtual printer port for USB) USB003 (Virtual printer port for USB) VPSPort: (Local Port)
	4 Next Cano

6. เลือกรุ่นเครื่องพิมพ์ จากนั้นกด Next

Select the man	ufacturer an	id model of your printer. If your printer came w	ith an installation
compatible print	ter software.		
Manufacturer	•	Printers	
Citizen Dell		Epson Stylus C67 Series (M) Epson Stylus C68 Series (M)	
Diconix	-	Epson Stylus C70 Series (M)	

7. หน้าจอจะโชว์ชื่อรุ่นเครื่องพิมพ์ที่เลือก จากนั้นกด Next

~	
🕒 🖶 Add Print	2r
and the second second	
Type a prir	iter name
Printer name:	Epson Stylus C67 Series (M)
	Set as the default printer
This printer will	be installed with the Epson Stylus C67 Series (M) driver.
	6 Next Cancel

8.กดปุ่ม Finish

💽 🖶 Add Printer
You've successfully added Epson Stylus C67 Series (M)
To see if the printer is working correctly, or to see troubleshooting information for the printer, print a test page. Print a test page
7 Finish Cancel