

1.ใส่แผ่นไดร์เวอร์ จากนั้นดับเบิ้ลคลิกไอคอน ชีดี เอปสัน

#### 2.ดับเบิ้ลคลิกที่โฟล์เดอร์ <mark>Printer</mark>

000	C EPSON	
Online Manual	Prin	lter
EasyPrintModule	Easy Pho	ato Print



### 4.ใส่ Password (หากมี) จากนั้นคลิก OK

	EPSON_IJ_Printer wants to make changes. Type your password to allow this.
	Name: admin
	Password:
?	Cancel OK

#### 5.คลิก Continue

000	EPSON_U_Printer
	License
<ul> <li>License</li> <li>Installation Type</li> <li>Installing</li> <li>Finish Up</li> </ul>	Default       \$         SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREEMENT       Important Read THIS SOFTWARE LICENSE AGREEMENT         CAREFULLY. The computer software product, fontware, typefaces and/or data, including any accompanying explanatory written materials (the "Software") should only be installed or used by the Licensee ("you") on the condition you agree with SEIKO EPSON CORPORATION ("EPSON") to the terms and conditions set forth in this Agreement. By installing or using the Software, you are representing to agree all the terms and conditions set forth in this Agreement. You should read this Agreement carefully before installing or using the Software. If you do not agree with the terms and conditions of this Agreement, you are not permitted to install or use the Software.         1. License. EPSON and its suppliers grant you a personal, nonexclusive, royalty-free, non-sublicensable limited license to install and use the Software on any single computer or computers.         Installation powered by VISE X       Co Back       Continue

#### 6.คลิก Agree



### 7.คลิก Uninstall จากนั้น คลิก Uninstall

000	EPSON_UPrinter
1 O License O Installation Type O Uninstalling Finish Up	Uninstall your EPSON Office B1100/T1100 printer driver, click the Uninstall button. The following files will be uninstalled: - EPSON Office B1100/T1100 printer software Disk space available: > 4GB Approximate disk space needed: 0K 2 Go Back Uninstall

#### 8.คลิก Continue



### 9.จะปรากฎหน้าต่างกำลังดิดตั้ง

$\circ \circ \circ$	EPSON_IJ_Printer
	Uninstalling
License	
Installation Type	
🖯 Uninstalling	
Finish Up	
	Items remaining to be deleted: 2649
	Installation powered by VISE X
	Ston
	btop

### <u>10.คลิก Quit</u>

000	
	Finish Up
⊖ License ⊖ Installation Type ⊖ Installing ⊖ Finish Up	The software was successfully installed.
	Installation powered by VISE X
	Quit

## \*\*หลังจา<u>กที่ R</u>emove ไดร์เวอร์เสร็จแล้วจะต้องทำการลบในระบบด้วย วิธีการดังนี้

# 1. คลิกที 🚺 จากนั้นเลือก System Preferences...

Ť.	Finder	File	Edit	View
Al Sc Aj	oout This oftware Up op Store	Mac odate		
Sy	stem Pref	erence	s	
D	ock			•
Lo	ocation			•
Re	ecent Item	s		•
Fo	orce Quit F	inder	τô	- শ্ল ত
SI	eep			
Re	estart			
Sł	ut Down.			
Lo	og Out adr	nin	Û	жQ

#### 2.คลิกที่ Print & Scan



# 3.คลิกที่ชื่อเครื่องพิมพ์ จากนั้นคลิก 🗔

Offline     EPSON Epson ME O	EPSON Ep	son Stylus Office T1100
EPSON Epson ME O	Open Pr	rint Queue
EPSON Epson Stylu	Options	& Supplies
EPSON Epson Stylu	Location: admin's Con	nputer
EPSON Epson Stylu	Kind: EPSON SO T	1100 Series (1)
EPSON Epson Stylu	Status: Idie	
EPSON Stylus Photo	Share this printer on the r	network Sharing Preferen
EPSON T13 T22E	A Printer shari	ng is turned off.
Det	ault printer: Last Printer Used	•
Default	paper size: A4	: