้วิธีการเปิด Service Print Spooler สำหรับ Windows (ทุกรุ่นที่ใช้งานผ่านไดร์เวอร์)

เมื่อ Service Print Spooler ถูกปิด หรือ ขึ้นเออเรอร์ ดังรูป



## ให้ทำการเปิด Service Print Spooler วิธีการมีดังนี้

1.ไปที่ Control Panel



## 2.ไปที่ Administrative Tools



## 3. ดับเบิ้ลคลิก Services





7 Computer Data Manageme Sources











Services



3

on

7



Firewall

with

Advanced...

THAN 7

Windows PowerShell Modules



(ODBC)











Windows Memory Diagnostic

# 4. ดับเบิ้ลคลิก Print Spooler

Services (Local)					
Print Spooler	Name	Description	Status	Startup Type	Log On As
<u>Stop</u> the service <u>Restart</u> the service	Parental Controls     Peer Name Resolu     Peer Networking	This service Enables serv Enables mul		Manual Manual Manual	Local Service Local Service Local Service
Description: Loads files to memory for later printing	Performance Cou Performance Logs Performance Logs Plug and Play PnP-X IP Bus Enu	Provides ide Enables rem Performanc Enables a c The PnP-X	Started Started	Manual Manual Automatic Automatic (D	Local Service Local Service Local Service Local Syste Local Syste
	PNRP Machine Na Pointsec Pointsec Service S Portable Device E Power	This service Enforces gr Manages p	Started Started Started	Manual Automatic Automatic Manual Automatic	Local Service Local Syste Local Syste Local Syste Local Syste
	Problem Reports a Problem Reports a Program Compati Protected Storage Quality Windows Remote Access A Remote Access C	Loads files t This service This service Provides pr Quality Win Creates a co Manages di	Started Started Started	Automatic Manual Automatic Manual Manual Manual Manual	Local Syste Local Syste Local Syste Local Syste Local Syste Local Syste Local Syste Local Syste

## 5. เลือก **Startup type** เป็น **Automatic**

และ Service status ถ้าเป็น Stopped อยู่ ให้ทำการเปิด โดยกดปุ่ม Start

Print Spooler Properties (Local Computer)				
General Log On	Recovery Dependencies			
Service name:	Spooler			
Display name:	Print Spooler			
Description:	Loads files to memory for later printing			
Path to executable: C:\Windows\System32\spoolsv.exe				
Startup type:	Automatic 👻			
Help me configure service startup options.				
Service status: Start	Stopped Stop Pause Resume			
You can specify the start parameters that apply when you start the service from here.				
Start parameters:				
OK Cancel Apply				

6. Service status จะเป็น Started ดังรูป แล้วคลิก OK หลังจากนั้นให้ลองใช้งานหรือ ติดตั้งไดรเวอร์ใหม่อีกครั้ง

Print Spooler Properties (Local Computer)				
General Log On	Recovery Dependencies			
Service name:	Spooler			
Display name:	Print Spooler			
Description:	Loads files to memory for later printing			
Path to executable: C:\Windows\System32\spoolsv.exe				
Startup type:	Automatic			
Help me configure service startup options.				
Service status:	Started			
Start	Stop Pause Resume			
You can specify the start parameters that apply when you start the service from here.				
Start parameters:				
OK Cancel Apply				