วิธีการติดตั้งไดร์เวอร์เครื่องพิมพ์ รุ่น WF-7611 เชื่อมต่อแบบ USB สำหรับ Mac OSX

**เปิดเครื่องพิมพ์และเชื่อมต่อสาย USB ระหว่างเครื่องพิมพ์กับคอมพิวเตอร์ก่อน **โหลดไดร์เวอร์ ตามลิ้งค์ด้านล่าง

http://download.ebz.epson.net/dsc/du/02/DriverDownloadInfo.do?LG2=EN&CN2=SG&CTI=4&PRN=WF-7610%20Series&OSC=MP

1.โหลดไดร์เวอร์มา และดับเบิ้ลคลิกเพื่อเปิด



2.ดับเบิ้ลคลิก EPSON Printer.pkg



3.คลิกที่ **Continue**



4.คลิกที่ Continue

| $\bigcirc \bigcirc \bigcirc$ | 💝 Install EPSON Printer Driver 🔒 | | | | | |
|---|---|--|--|--|--|--|
| Software License Agreement | | | | | | |
| Introduction | English + | | | | | |
| LicenseDestination Select | SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREEMENT | | | | | |
| Installation Type Installation | IMPORTANT! READ THIS SOFTWARE LICENSE AGREEMENT CAREFULLY. The computer software product, fontware, typefaces and/or data, including any accompanying explanatory written materials (the "Software") | | | | | |
| Summary | should only be installed or used by the Licensee ("you") on the condition you agree with SEIKO EPSON CORPORATION ("EPSON") to the terms and conditions set forth in this Agreement. By installing or using the Software, you are representing to agree all the terms and conditions set forth in this Agreement. You should read this Agreement carefully before installing or using the Software. If you do not agree with the terms and conditions of this Agreement, you are not | | | | | |
| | permitted to install or use the Software. License. EPSON and its suppliers grant you a personal, nonexclusive, royalty- free, non-sublicensable limited license to install and use the Software on any single computer or computers that you intend to use directly or via network. You may allow other users of the computers connected to the network to use the Software, provided that you (a) ensure that all such users agree and are bound by the terms of the of this Amount (b) ensure that all end used to all on the set of the set. | | | | | |
| | Print Save Go Back Continue | | | | | |



6.คลิกที่ **Install**



7.ใส่ Password (หากมี) จากนั้นคลิก Install Software

| Installer is trying to install new software. Type your password to allow this. | | | | |
|---|--|--|--|--|
| Name: HotLine | | | | |
| Password: ••••• | | | | |
| Cancel Install Software | | | | |

8.จะปรากฎหน้าต่างกำลังติดตั้ง



9.คลิก **Close**







11.คลิกที่ Printers & Scanners



12.คลิก +



13.คลิกเลือกรุ่น EPSON WF-7610 Series USB Multifunction คลิก Add

| | | Add | | | |
|--|---------------------------------------|-----------------------------|---|---|--|
| Default Fax | IP Windows | Q. | Search | | |
| Name B-STODIN-71 EPL-N2050 FPSON SC-P6 | סבבם (ור) ש רמומשמנ א שי 00 Series | acbook fio (2) | Kind Bonjour Bonjour | Shareu | |
| EPSON WF-3520 Series EPSON WF-7511 Series EPSON WF-7610 Series | | | Bonjour Bonjour USB Mu | Bonjour Multifunction Bonjour Multifunction USB Multifunction | |
| EPSONC40941 (K200) FAX WF-7610 Series (USB) LQ-2190-CE647C | | Bonjour EPSON Bonjour | Bonjour Multifunction EPSON FAX Bonjour | | |
| Name: | EPSON WF-7610 S | eries | | | |
| Location: | Palawat's MacBook Pro | | | | |
| Use: | EPSON WF-7610 S | Series | | \$ | |
| | | | | | |
| | | | | Add | |

14.จะแสดงรายชื่อรุ่นที่เพิ่มเข้ามา สามารถสั่งปริ้นงานได้

