

ปัญหา: สี Drop ลง เมื่อพิมพ์ Duplex

**สาเหตุ:** เมื่อมีการเลือกพิมพ์ Duplex ไดร์เวอร์จะทำการปรับให้เป็นโหมด ECO (ประหยัดกระดาษ ประหยัดหมึก) ซึ่งจะลด ความเข้มของหมึก 20%

้**วิธีแก้ไข:** ให้ปรับ density ในไดร์เวอร์ให้เป็น 0% สามารถทำตามขั้นตอนได้ดังนี้

1.เปิดไฟล์งาน และเข้าที่ File >> Print





- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ โทร.0-2685-9899
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>



หัวข้อ รองรับปริ้นเดอร์รุ่น รองรับระบบปฏิบัติการ : วิธีการแก้ไขพิมพ์สองหน้าแล้วสีจาง : Inkjet ที่รองรับ Duplex : Mac OS 10.10.x

# 2.ไปที่ **Layout**

_		Ū		
A states	Copies: 1			
Same - Provi 25 to local all Santteres - Multi-Same	Pages: All			
The same association.	C From: 1	to: 0		
Buand Sp. 14	FIOII.	10. 2		
	Layout		0	
Labor Date 19 -				
elle tanta talen - sen	Pages per Sheet:	1		
September of	Lavout Direction:		AA	
The second secon	Eayout Direction.			
Contraction buildfoord	Border	None		
		C anaciana		
	Two-Sided:	Off		
1 of 2 > >>		Poverse pa		
		Reverse page orientation		
		Flip horizoi	ntally	

#### 3.เลือก Two-sided Printing Settings

Tana and a second	Copies: 1	
Refer : IFED. XFL SE ServiceSI • Refer Indexe : Refer Indexe : • Refer : Refer to the Service : •	Pages: All	
The large <u>Association</u>	Erom: 1 to: 2	
Brandel Bar - 51		
Teacher III + II	v Lavout	
	Onlas Matching	
offer Saming agents - Saming	Color Matching	
	Page Paper Handling	
	Cover Page	
Ingeneration of the local data		- NI
The task is applied as presented in the	Layol Print Settings	10
00	Color Octings	
	Color Options	
	Two-sided Printing Set	tings
	Supply Levels	
< 1 of 2 >>>	Reverse pa	age orientation
	Elip borizo	atally
	Php honzo	intally



- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ
- โทร.0-2685<sup>-</sup>9899
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>



: วิธีการแก้ไขพิมพ์สองหน้าแล้วสีจาง : Inkjet ที่รองรับ Duplex : Mac OS 10.10.x

## 4.ให้เข้าที่ Document Type จะมีการให้เลือก Text ค่า Print Density จะเป็น 0%

Pages: All From: 1 to: 2 Two-sided Printing Settings	
From: 1 to: 2 Two-sided Printing Settings	
Two-sided Printing Settings ᅌ	
Two-sided Printing: Long-Edge binding	0
Document Type: Text	0
Adjustments:	_
Print Density:	
· 0	(%)
-50 0	
Increased Ink Drying Time:	
. 0	(sec)
0 +60	
When printing a photo or document containing a lot of so areas, reduce the density of the ink and increase its dryin	olid image ng time.
	Two-sided Printing:       Long-Edge binding         Document Type:       Text         Adjustments:       0         Print Density:       0         -50       0         Increased Ink Drying Time:       0         0       +60         When printing a photo or document containing a lot of sc areas, reduce the density of the ink and increase its drying

### ถ้า Document Type เป็น Text & Photos ค่า Print Density จะเป็น -30% จะต้องปรับเป็น 0%

1.0 <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b> <b>1.0</b>	Printer: EPSON L655 Series © Presets: Last Used Settings © Copies: 1 Pages: All ● From: 1 to: 2 Two-sided Printing Settings ©		Printer: EPSON L655 Series Presets: Last Used Settings Copies: 1 Pages: All From: 1 to: 2 Two-sided Printing Settings Copies: 1 Copies: 1 Copie
0 0 mm mm	Two-sided Printing: Long-Edge binding  Document Type: Text & Photos  Adjustments:  Print Density: -50 0  Increased Ink Drying Time:	v ( 1of2 > ≫	Two-sided Printing: Long-Edge binding Document Type: User Defined  Adjustments:  Print Density: -50 0 Increased Ink Drying Time:
PDF 🛃 Hide Details	<ul> <li>10 (sec)</li> <li>+60</li> <li>When printing a photo or document containing a lot of solid image areas, reduce the density of the link and increase its drying time.</li> </ul>	2 DDE M Hide Datalia	O (sec)     O +60     When printing a photo or document containing a lot of solid image areas, reduce the density of the ink and increase its drying time.



- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ
- โทร.0-2685-9899
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>

EPSON THAILAND / Jan 2017 / CS07



#### : วิธีการแก้ไขพิมพ์สองหน้าแล้วสีจาง : Inkjet ที่รองรับ Duplex : Mac OS 10.10.x

### ถ้า Document Type เป็น Text & Graphics ค่า Print Density จะเป็น -30% จะต้องปรับเป็น 0%

	Printer: EPSON L655 Series © Presets: Last Used Settings © Copies: 1 Pages: All • From: 1 to: 2 Two-sided Printing Settings © Two-sided Printing: Long-Edge binding © Document Type: Text & Graphics © * Adjustments: 9/int Density: 9/int Density:	Image: Contract of the second seco	Printer: EPSON L655 Series © Presets: Last Used Settings © Copies: 1 Pages: All Pages: All From: 1 to: 2 Two-sided Printing Settings © Two-sided Printing: Long-Edge binding Document Type: User Defined © * Adjustments: Print Density: 0 (%) 0 (%)
PDF V Hide Details	-50 0 Increased link Drying Time: 0 (sec) 0 +60 When printing a photo or document containing a lot of solid image areas, reduce the density of the ink and increase its drying time. Cancel Print	? PDF Y Hide Details	-50 0 Increased Ink Drying Time: 0 (sec) 0 +60 When printing a photo or document containing a lot of solid image arcss, reduce the density of the mc and increase its drying time.

## 5.เข้าที่ **Presets**

2.441 The set of the s	Copies: 1 Pages: All O From: 1 to: 2	
Inter D + 0 Inter D + 0 Interaction D + 0	Two-sided Printing	Settings 📀
Me hampen. ve	Two-sided Printing: Long-E	dge binding
tes fest es	Document Type: User D	efined
00	Adjustments:     Brist Density:	
(( 1 of 2 ) ))	-50	0 (%)
	Increased Ink Drying Time:	Ŭ
		. 0 (sec)
	0 When printing a photo or document areas, reduce the density of the ink a	+60 containing a lot of solid ima and increase its drying time



- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ โทร.0-2685-9899
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>

EPSON THAILAND / Jan 2017 / CS07



: วิธีการแก้ไขพิมพ์สองหน้าแล้วสีจาง : Inkjet ที่รองรับ Duplex : Mac OS 10.10.x

## 6.เลือกที่ Save Current Settings as Preset



# 7.ให้ตั้งชื่อตรง Preset Name จากนั้นกดปุ่ม OK

2.004 [].unite().		All printers				
Same and Ala Incident Statistics National Statistics Second Statistics Second Statistics		Cancel	ОК			
narian ila e han ila e han e han e han e		Two-sideo	d Printing Settings	٥		
		Two-sided Printing:	Long-Edge bindir	ng		0
Magnitus ar		Document Type:	Text			٥
00		Adjustments:				
		Print Density:				
< 🔇 1 of 2	> >>		~	0	(%)	
		-50	0			
		increased link Drying II	me:	0	(sec)	
		0	+60	U	(300)	
		When printing a photo or o areas, reduce the density	document containing a of the ink and increase	lot of its dry	solid image /ing time.	



#### : วิธีการแก้ไขพิมพ์สองหน้าแล้วสีจาง : Inkjet ที่รองรับ Duplex : Mac OS 10.10.x

8.เมื่อตั้งชุดคำสั่งเรียบร้อยแล้ว อันที่ตั้งค่าไว้ จะมาแสดงที่หน้าหลัก สามารถเลือกใช้งานได้เลย ไม่ต้องมาปรับใหม่อีก

Insert Table Chart Text Shape Medi	lia Commer	Default Settings Last Used Setti	s ngs		Share	(?) Tips
1.das	Printer Presets	Color on plain p Grayscale on pl	apers ain papers			
2.1484  C.1484  C.1484  C.1484  C.1484  C.1484  C.148  C.148 C.148  C.148  C.148  C.148  C.148  C.148  C.148  C.14	Copies Pages.	Save Current Se Show Presets	ettings as Pre	set		
No. Origo            Barriero	•	From: 1 Two-sided	to: 2 Printing Setti	ings ᅌ		
	Two	-sided Printing: ocument Type:	Long-Edge I Text	binding		0 0
• •	<ul> <li>Adjustmer</li> <li>Print</li> </ul>	nts: Density:				
<pre></pre>		-50		0	(%)	
	Incre	ased Ink Drying Tin	ne:	+60	(sec)	
	A When pr areas, re	inting a photo or do educe the density o	ocument contai f the ink and inc	ning a lot of crease its dry	solid image ving time.	



- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ โทร.0-2685-9899
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>