้วิธีการตรวจสอบและทำความสะอาดหัวพิมพ์เครื่องพิมพ์รุ่น L100,L200 สำหรับ Mac OS X

## <u>เมื่องานพิมพ์มีความผิดปกติ</u>

เมื่อมีสีของงานพิมพ์ขาดหายไป หรือมีเส้นขาวเกิดบนผลงานพิมพ์ ควรทดสอบระบบการทำงานของหัวพิมพ์

1.คลิกที่ 🅅 จากนั้นเลือก System Preferences ...

	Finder	File	Edit	View
Ał So Ar	oout This oftware Up op Store	Mac odate	•	
Sy	stem Pref	ference	es	
Do	ock			•
Lo	cation			►
Re	cent Item	IS		•
Fo	orce Quit I	Finder	70	80
Sle	eep			
Re	start			
Sh	ut Down.			
Lo	g Out ad	min	0	жQ

2.คลิก Print and Scan (สำหรับ Mac 10.7 )... ( หรือเลือก Print and Fax สำหรับ Mac 10.6)

000			System P	Preferences			
	Show All					Q	
Personal							
New Street			<b>2</b>	0	101	Q	$\bigcirc$
General	Desktop & Screen Saver	Dock	Mission	Language & Text	Security & Privacy	Spotlight	Universal Access
Hardware							
6		0				-	0
CDs & DVDs	Displays	Energy Saver	Keyboard	Mouse	Trackpad	Print & Scan	Sound
Internet &	Wireless						
@			8				
Mail, Contacts & Calendars	MobileMe	Network	Bluetooth	Sharing			
System							
11	办	æ	(0)	8	0		
Users & Groups	Parental Controls	Date & Time	Software Update	Speech	Time Machine	Startup Disk	
Other							
D	Ö						
Version Cue CS4	Déjà Vu						A.

3. ดับเบิ้ลคลิกที่เครื่องพิมพ์

Printers Adobe PDF 9.0 e Idle. Last Used EPSON L200 ดับเบิ้อง	nân 📥 EP:	Print Scan SON L200		
EPSON L800 • Offline EPSON WP-4011 Series • Idle EPSON WP-4011 Seri • Idle	Location: adm Kind: EPS Status: Idle	Open Print Queue Options & Supplie nin's Computer ON L200 Series on the network	Sharing Preferences.	
+ -	A Prin	ter sharing is turned	l off.	
Def	ault printer: Last Printer	r Used	\$	
Default	paper size: A4		\$	

## 4.จะปรากฎหน้าต่างดังรูป คลิกที่ Printer Setup

nter Supply Levels Prin	nter Setup		Printer Scanner
y			
Name	Sent	Completed	
	iter Supply Levels Pri	iter Supply Levels Printer Setup	lter Supply Levels Printer Setup

# 5.คลิก Utility จากนั้นคลิก Open Printer Utility

000	EPSON L200	
Delete Hold Job Info Pause	Printer Supply Levels Printer Setup	Printer Scanner
	General Driver Supply Levels Utility	
<b>1</b>	Open Printer Utility	
	Print Test Page	
-	Clean Print Heads	
Stat		
	Car	OK

6.คลิก **Nozzle Check** 



7.คลิก **Print** 

EPSO	N EPSON L200
To perform a no computer. Also feeder. Click [Pr	e Check ozzle check, make sure that the printer is on and connected to the make sure that A4 or Letter size plain paper is loaded in the sheet rint] to print a nozzle check pattern or click [Cancel] to quit.

8.จะแสดงหน้าต่างกำลังพิมพ์แบบทดสอบ

000	Epson Printer Utility 4
EP A	Processing
To perf comput feeder.	form a nozzle check, make sure that the printer is on and connected to the ter. Also make sure that A4 or Letter size plain paper is loaded in the sheet Click [Print] to print a nozzle check pattern or click [Cancel] to quit.
	Cancel Print

9. การเปรียบเทียบงานพิมพ์

<u>ลักษณะที่ 1</u> คือระบบการพิมพ์ปกติ ให้เลือกปุ่ม Finish

<u>ลักษณะที่ 2</u> คือระบบการพิมพ์ผิดปกติ ให้เลือกปุ่ม Clean เพื่อทำขั้นตอนต่อไป

00	Epson Printer Utility 4
EPSON	EPSON L200
Nozzle Che	ck
	2
Upper: Good Lower: Cleaning needed	
Compare the printed has broken lines, click	pattern with the sample above. If the nozzle check pattern k [Clean]. Click [Finish] to quit.
Clean	Finish

10.ตรวจสอบที่เครื่องพิมพ์ต้องหมุนตัวล็อคไปที่รูปขณะที่พิมพ์ 🖨 จากนั้นคลิก Start

000	Epson Printer Utility 4
<b>EPSO</b>	N EPSON L200
Head 0	Ileaning
Click [Start] to c only clean the p "Nozzle Check" Note: Before rur unlocked (Printi	lean the print head nozzles. Because cleaning consumes some ink, rint head when faint areas or gaps appear in your printout. Use the utility first to confirm that the print head needs to be cleaned. uning a cleaning, make sure that the transportation lock is in the ng) position as shown in the illustration.
	Start Cancel

11.จะปรากฏหน้าต่างกำลังทำความสะอาดหัวพิมพ์



12.คลิก Print Nozzle Check Pattern เพื่อพิมพ์แบบทดสอบ จากนั้นทำตามขั้นตอนตามข้อ10 ถึง ข้อ12

000	Epson Printer Utility 4
EPSON	EPSON L200
Head Cl	eaning
Nozzle Check Pat	ern].
Print Nozzle	Check Pattern Finish

#### หมายเหตุ :

 การทำความสะอาดหัวพิมพ์จะใช้น้ำหมึกจากทุกตลับ ดังนั้นควรทำความสะอาดหัวพิมพ์ เมื่อคุณภาพการพิมพ์ ลดลงเท่านั้น

- ถ้าคุณภาพการพิมพ์ยังไม่ดีขึ้น หลังจากการทำความสะอาด 2 รอบ ให้ปิดเครื่องพิมพ์เป็นเวลาอย่างน้อย 5-10 นาที

็จากนั้นทำความสะอาดหัวพิมพ์อีกครั้งถ้าคุณภาพงานพิมพ์ยังไม่ดีขึ้นให้ทำ <u>"Power Ink Flushing"</u> หรือ <u>"ทำ</u> <u>ความสะอาดแบบขั้นสูง"</u>แต่วิธีการดังกล่าว ไม่ควรเกิน2ครั้ง หากเกิน 2 ครั้ง อาจทำให้แผ่นซับหมึกเต็มให้ติดต่อ ศูนย์บริการ เอปสันทั่วประเทศไทย

### <u>\*\*วิธีการ Power Ink Flushing</u>

1.คลิก **Power Ink Flushing** 



2.คลิก **Next** 

_	_	-
		_

EPS	SON	EPSON L	200			
If there is	Power Ink F	lushing	olors in the s	print outs	even after i	running Head
Cleaning solve the	several times problem.	s, you may nee	d to replace	the ink in	side the in	k tubes to
This fund	ction allows y	ou to replace a	all of the ink	inside the	ink tubes.	
This func running l	ction consum Head Cleanin	es a lot of ink. g several time	We only rec 5.	ommend (	using this f	unction after
				N	lext >	Cancel



# EPSON EPSON L200



Power Ink Flushing

Before running this function, make sure that the transportation lock is in the unlocked (Printing) position as shown in the illustration.

Note: The transportation lock must always be unlocked when the printer is in use.



4.คลิก **start** 

-	-	-
0	0	-
		1000
0		

Epson Printer Utility 4

cpool i filler offict i
EPSON L200
k Flushing
vant to run this function? The ink in the tubes, a lot of ink needs to be consumed. The at you try running Head Cleaning several times to try and solve The using this function. Click [Cancel], and then try Head Cleaning.
n effects the service life of the waste ink pads. Waste ink pads y earlier by running this function. Have reached the end of their service life, contact Epson Support ment.
t the ink replacement. tarted, this function cannot be interrupted.
Start

5.จะปรากฎหน้าต่างกำลังทำความสะอาดหัวพิมพ์



6.คลิก Print Nozzle Check Pattern เพื่อพิมพ์แบบทดสอบ

0.0	Epson Printer Utility 4
EPSON	EPSON L200
Power li	nk Flushing
Power Ink Flushin Fo check that ink	g is complete. flushing was effective, click [Print Nozzle Check Pattern].
Print Nozzle	Check Pattern Finish

\*\* ถ้าคุณภาพงานพิมพ์ยังไม่ดีขึ้นให้ปิดพักเครื่องทิ้งไว้ประมาณ 10 นาที หากยังไม่ดีขึ้นแนะนำติดต่อศูนย์บริการ เอปสันทั่วประเทศ