ต้องการวิธีการปิดฟังก์ชั่น Power Save สำหรับเครื่องพิมพ์รุ่น M2010D/DN / M2310D/DN , M2410D/DN (Windows XP/7) ค่ะ

เข้าที่เมนู Printer and fax (Windows XP) หรือ Devices and Printers (Windows 7) คลิกขวาที่ไดร์เวอร์เลือก Properties (Windows XP) หรือ Printer Properties(Windows 7) เลือก Optional Setting และเลือก Printer Setting

💩 EPSON AL-M2010 Advanced (Copy	1) Properties
General Sharing Ports Advanced Sec	uri y Optional Settings Font Substitution
EPSON Status Monitor	
Simple Status	Display about error information etc. Notice Settings
Printer © Update the Printer Option Info Automatic © Update the Printer Option Info Manually	ally Settings
Installed Memory 32MB Optional Paper Sources No Optional Paper Source เลือก	Status Sheet Printer Setting
Printer Driver Driver Settings	
	OK Cancel Apply Help

4.กดปุ่ม	Ctrl + Shift	ค้างไว้ แล้วกด <mark>OK</mark>	จะมีสถานะของ	OFF	ให้เลือกใน	Time to Sleep
----------	--------------	--------------------------------	--------------	-----	------------	---------------

IP Trau Paper Size	A 4 210 u 297 mm		MP Trau Paper Tupe	Disia		
Mr Hayrapei Size	A4 210 x 237 mm		мг наугарынуре	Fiain		
LC1 Paper Size	A4 210 x 297 mm	•	LC1 Paper Type(4)	Plain		
					Execute	
Printing Menu						
Density	3	•	Dot Correction	C Dot Correction		
			☐ Wide A4		Execute	
Setup Menu						
Time to Sleep	15 min	-	Language (Status Sheet)	English	-	
Paper Source	OFF		Time Out	60 sec	•	
Paper Source Priority	15 min		Page Protect	Auto	Ŧ	
Auto Fiect Page	30 min 60 min				_	
	120 min 180 min					
	240 min					
Auto Continue						
					Execute	