

<u>วิธีการสั่งพิมพ์งานจากเครื่องคอมพิวเตอร์เชื่อมต่อ Wi-Fi Direct</u>

1. เมื่อเปิดเครื่องพิมพ์ขึ้นมา เครื่องจะพิมพ์ ข้อมูลออกมา ดังภาพ

**หมายเหตุ : SSID คือชื่อของ Wi-Fi Direct : Passphrase คือ รัหสผ่านของ Wi-Fi Direct

SSID	:EPSON_Printer
Encryption Type	:WPA-PSK(AES)
Passphrase	:12345678
IP Address	:192.168.192.168
MAC Address	:78-48-87-47-57-F2

2. Connect Wireless ที่เครื่องคอมพิวเตอร์ โดยให้เลือก Connect ไปที่ชื่อ Wi-Fi Direct ของเครื่องพิมพ์

คลิกขวาที่ไอคอน 🌌 ด้านล่างขวาจอคอมพิวเตอร์ และเลือกชื่อ Wi-Fi ของเครื่องพิมพ์ 1 คลิก Connect

Networks			
Airplane mode			
Off			
Wi-Fi			
On			
Limited			
.III EPSON_Printer			
Connect automat	ically		
	Connect		
Call Center 0-2685-9899	 สอบถามข้อมูลการ โทร.0-2685-989 เวลาทำการ : วันจั <u>www.epson.co.t</u> 	■ เรใช้งานผลิดภัณฑ์และบริการ 99 จันทร์ – ศุกร์ เวลา 8.30 – 17.30 น.ยกเว้นวันหยุดนักขัดฤก <u>.th</u>	ษ์
	EPSON THAILAN	ND / Jul 2016 / CS12	



3. จะมีหน้าต่างให้ใส่ **Password** Wi-Fi Direct เมื่อใส่เสร็จแล้ว คลิก **OK**

Networks	
EPSON_Printer	
Enter the network secu	rity key
Next	Cancel
Next	Cancel

4. เมื่อ Connect Wi-Fi Direct เรียบร้อยแล้ว เปิดเข้าไปยังโฟลเดอร์ของไดร์เวอร์เครื่องพิมพ์ แล้วดับเบิ้ลคลิก ตัว ดิดตั้ง ดังภาพ

หมายเหตุ : หากไม่มีไดร์เวอร์เครื่องพิมพ์ สามารถเข้าไปดาวโหลดได้ที่ <u>www.epson-pos.com</u>

Name	Date modified
🞇 APD_507_P20	27/4/2559 5:07
APD5_Install_sc_revE	27/4/2559 5:07
APD5_MAN_P20_SC_C	27/4/2559 5:07
APD5_README_SC	27/4/2559 5:07



- 🕨 สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ
- โทร**.0-2685-9899**
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>



: วิธีการเชื่อมต่อ Wi-Fi Direct ร่น TM-P20 สำหรับ Windows

5. คลิก **Next**



6. คลิก Agree เสร็จแล้ว คลิก Install

EPSON Advanced Printer Driver Ver.5	×
License Agreement	
Please read the License Agreement carefully. Click [Agree] to accept the terms and conditions of this License Agreement, and then click "Install". Otherwise, click "Back".	
SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREEMENT IMPORTANT! READ THIS SOFTWARE LICENSE AGREEMENT CAREFULLY. The computer software product, fontware, typefaces and/or data, including any accompanying explanatory written materials (the "Software") should only be installed or used by the Licensee ("you") on the condition you agree with SEIKO EPSON CORPORATION ("EPSON") to the terms and conditions set forth in this Agreement. By installing or using the Software, you are representing to agree all the terms and conditions set forth in this Agreement. You should read this Agreement carefully before installing or using the Software. If you do not agree with the terms and conditions of this Agreement, you are not permitted to install or use the Software.	^
1. License. EPSON and its suppliers grant you a personal, nonexclusive, royalty-free, non- O Disagree Image: Agree	*
Back Insta	



- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ
- โทร.0-2685-9899
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- www.epson.co.th



4

7. จะปรากฎหน้าต่างกำลังติดตั้ง



8. คลิก **Next**

EPSON Advanced Printer Driver Ver.5	
Printer Registration	<u> </u>
The printer is ready for registration. Connect the printer to your computer and turn the printer power on. Click "Next" to register the printer.	
	Next >



- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ โทร.0-2685-9899
- เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>



9. เลือก Port Type เป็น **Ethernet** หลังจากนั้น พิมพ์ **IP Address** ที่เครื่องพิมพ์ พิมพ์ออกมา เสร็จแล้วคลิก **Save Settings** ดังภาพ

File I. Select Printer Name New Printer> Select Printer Name New Printer> Set to Printer Port Port Port Port Port Port Port Po	😮 Regi	ister, Change and Delete EPSON TM Prir	nter 🗕 🗆 🗙
1. Select Printer Name Model KNew Printer> Status (New Printer) Status Status (New Printer) Status Status (New Printer) Status Status (New Printer) Status Status (New Printer) Model (Port Type) (ErSON TM-P20 Receipt5) (Paddress) (Paddress) (Set to Printer) (Set to Printer) (Set to Printer) (Set to Printer) (Database) (Paddress) (Set to Printer) (S	File		
Name Model Status KNew Printer> Status Status 2. Printer 3. Communication Settings 4. Apply Model Port Type Ethernet Image: Set as Default Printer Model Port Auto setup Set as Default Printer Port Port Set in Set in Settings Save Settings Name Port Set to Printer Save Settings EPSON TM-P20 Receipt5 IP Address 2 192.168.192.168 Save Settings Attention: Mean connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver5 for DM-D Install Test Print 5. Complete Imanual. Imanual. Imanual. Imanual. Imanual. Imanual.	1. Select Printer		
Second Section Second Section Second Section Second Section Model Port Type EPSON TM-P20 Receipt5 Port Attention: When connecting the customer display to the printer, refer to the EPSON Advanced Printer or ver.5 for DM-D Install Manual.	Name	Model	Status
2. Printer 3. Communication Settings Model Port Type EPSON TM-P20 Receipt5 Port Name Port EPSON TM-P20 Receipt Port Auto setup 3 Save Settings Port Port	<new printer=""></new>		
2. Printer 3. Communication Settings Model Port Type 1 Ethernet Port Auto setup Port Port Port <t< td=""><td></td><td></td><td></td></t<>			
2. Printer 3. Communication Settings 4. Apply Model Port Type 1 Ethernet Set as Default Printer Port Auto setup 3 Save Settings Name Printer 9 (192.168.192.168) EPSON TM-P20 Receipt IP Address 2 (192.168.192.168) Attention: Set to Printer Copy When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual. Test Print			
2. Printer 3. Communication Settings Model Port Type 1 Ethernet EPSON TM-P20 Receipt5 Port Name 2 192.168.192.168 EPSON TM-P20 Receipt IP Address Attention: Set to Printer When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual.			
2. Printer 3. Communication Settings 4. Apply Model Port Type 1 Ethernet Set as Default Printer Port Auto setup 3 Save Settings Port Port Set as Default Printer Port Auto setup 3 Save Settings IP Address 2 192.168.192.168 Set to Printer Copy Delete Test Print Test Print When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual. 5. Complete			
2. Printer 3. Communication Settings 4. Apply Model Port Type 1 Ethernet Image: Set to Printer Port Auto setup Image: Set to Printer Name Set to Printer Copy EPSON TM-P20 Receipt Image: Set to Printer Test Print Attention: When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual. Image: Set to Printer Image: Set to Printer			
Model Port Type 1 Ethernet Image: Set as Default Printer Model Port Type 1 Ethernet Image: Set as Default Printer Port P20 Receipt5 IP Address 2 192.168.192.168 Name Set to Printer Copy Delete EPSON TM-P20 Receipt Test Print Test Print Attention: When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual. For the printer of the test Print	2 Printer	3 Communication Settings	4 Apply
Model Port Auto setup Set as Default Printer Model Port Auto setup 3 IP Address 2 192.168.192.168 3 Name Set to Printer Copy Delete EPSON TM-P20 Receipt Test Print Test Print Attention: When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual. Fort Printer 5. Complete	L. I TIRO		
Model Port Auto setup Image: Complete setup <td></td> <td>Ethernet</td> <td>✓Set as Default Printer</td>		Ethernet	✓Set as Default Printer
EPSON TM-P20 Receipt5 IP Address 2 192.168.192.168 Save Settings Name Set to Printer Copy Delete EPSON TM-P20 Receipt Test Printer Test Print Attention: When connecting the customer display to the printer priver Ver.5 for DM-D Install Manual. 5. Complete	Model	Port Auto setup 🗸	2
Name Set to Printer Copy Delete EPSON TM-P20 Receipt Test Printer Test Print Attention: When connecting the customer display to the printer, priver Ver.5 for DM-D Install Manual. 5. Complete	EPSON TM-P20 Receipt5 🗸 🗸	IP Address 2 102 168 102 168	3 Save Settings
Name Set to Printer Copy Delete EPSON TM-P20 Receipt Test Print Attention: Test Print When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual. 5. Complete		1 Huuress 2 132,100,132,100	
EPSON TM-P20 Receipt Test Print Attention:	Name	Set to Printer	Copy Delete
Attention: When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual.	EPSON TM-P20 Receipt		Tred Duint
Attention: When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual.	AU. 17 A		Test mint
Printer Driver Ver.5 for DM-D Install Manual.	When connecting the customer display to		E. Oseenlata
Manual.	the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install		5. Complete
Next	Manual.		Next

10. คลิก **Yes**

Name	Model	Status
<new printer=""></new>	EPSON TM-P20 Receipt5	Installed
	PrinterReg	
2. Printer	Printer settings successfully saved. Do you want to perform a test print?	·. Apply]Set as Default Printer
Model EPSON TM-P20 Receipt5	Yes No	Save Settings
Name EPSON TM-P20 Receipt Attention: When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual.	Set to Printer	Copy Delete Test Print 5. Complete Next

<u>www.epson.co.th</u>



	Regis	ster, Change and Delete EPSON TM Prir	nter – 🗆 🗵
e			
. Select Printer			
Name		Model	Status
<new printer=""></new>		EPSON TM-P20 Receipt5	Installed
_			
		PrinterReg	×
2. Printer	A test pa	ge was printed out. Check to ensure that it printe	ed correctly. Printer
Model EPSON TM-P20 Rece			OK re Settings
Name		Set to Printer	Copy Delete
EPSON TM-P20 Receipt			Test Print
Attention: When connecting the custor the printer, refer to the EPS Printer Driver Ver.5 for DM- Manual.	ner display to ON Advanced -D Install		5. Complete

12. จะแสดงชื่อเครื่องพิมพ์ สถานะ Installed ดังภาพ ให้คลิก Next

Y Reg	ister, Change and	I Delete EPSON TM Pri	nter 🗕 🗆 🗙
File			
1. Select Printer			
Name	Model		Status
EPSON TM-P20 Receipt	EPSON TM	-P20 Receipt5	Installed
2. Printer	3. Communicat Port Type Et	ion Settings hernet v	4. Apply ✓Set as Default Printer
Model EPSON TM-P20 Receipt5 V	Port IP Address	ESDPRT001	Save Settings
Name EPSON TM-P20 Receipt		Set to Printer	Copy Delete Test Print
When connecting the customer display to the printer, refer to the EPSON Advanced Printer Driver Ver.5 for DM-D Install Manual.			5. Complete



- สอบถามข้อมูลการใช้งานผลิตภัณฑ์และบริการ โทร.0-2685-9899
 - เวลาทำการ : วันจันทร์ ศุกร์ เวลา 8.30 17.30 น.ยกเว้นวันหยุดนักขัตฤกษ์
- <u>www.epson.co.th</u>

EPSON THAILAND / Jul 2016 / CS12



13. คลิก **Close**



14. จะปรากฏชื่อเครื่องพิมพ์ในหน้าต่าง Devices and Printters สามารถสั่งพิมพ์ผ่านคอมพิวเตอร์ได้ผ่านไดร์เวอร์นี้

	Convicts and Printers	and the second se
💿 = 🕆 🤹 Control Panal	All Control Paret Barry Devices and Printers	w di Saarah Devisia and Protass 🖉
Edit View Tools Help		
dd a device - Add a primer		
Devices (3)	Mar .	
I (I		
DTSOFT Virtual V(P-BMS/) CdRom Device	8942b AML2044WateNet	
Multimedia Devices (4)		
СТР СР ЕЗНІВІ МАГДАМАК-РС	Une WTSHINNAM	
Printers (3)	3)	
EFSON TM-#25 Recept	Microsoft XPS Document Writer	
10 harrs		

EPSON THAILAND / Jul 2016 / CS12