 



Home Projector

EH-TW750
EH-TW740
EH-TW710



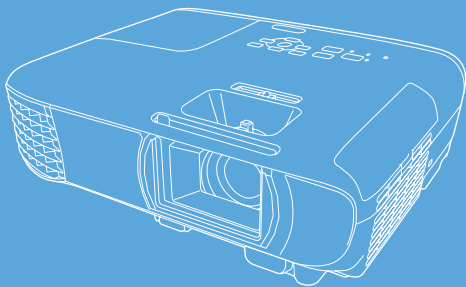


EN	Quick Start Guide	LV	Ātrās darba uzsākšanas pamācība
DE	Kurzanleitung	EL	Οδηγός γρήγορης εκκίνησης
FR	Guide de démarrage rapide	TR	Hızlı Başlangıç Kılavuzu
IT	Guida di avvio rapido	SL	Priročnik za hitri zagon
ES	Guía de inicio rápido	HR	Kratke upute
PT	Guia de Referência Rápida	MK	Прирачник брз почеток
NL	Introductiehandleiding	SR	Uputstvo za brz početak
DA	Introduktion	CA	Guia d'inici ràpid
FI	Pika-aloitusopas	RU	Руководство по быстрой установке
NO	Hurtigveiledning	UK	Коротка інструкція "Початок роботи"
SV	Snabbstartsguide	KK	Қысқа іске қосу нұсқаулығы
CS	Úvodní příručka	KO	빠른 시작 가이드
HU	Bevezetés	ID	Panduan Ringkas
PL	Przewodnik szybkiego startu	AR	دليل البداية السريعة
SK	Stručná príručka	FA	راهنمای سریع برای شروع بکار
BG	Ръководство за бърз старт	ZHS	設定手冊
RO	Ghid de pornire rapidă	ZHT	設定説明書
ET	Lühijuhend		
LT	Trumpas pradžios vadovas		

 1

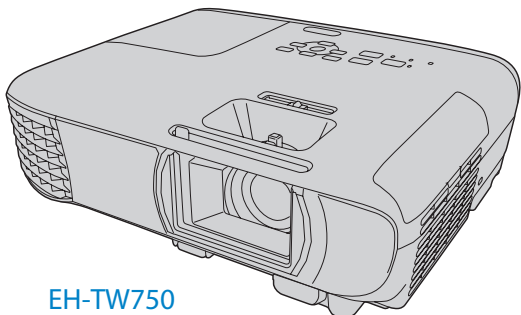





EH-TW750

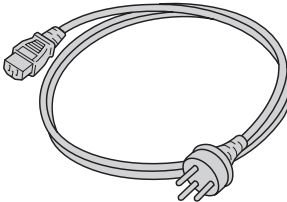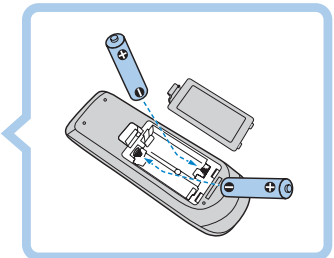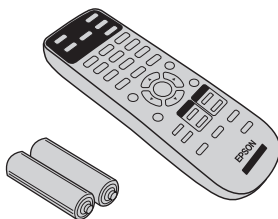   








EPSON		Epson Home Cinema Projector	
1	Quick Start Guide	11	Using the projector with a computer
2	Basic operation	12	Using the projector with a PC
3	Getting started	13	Using the projector with a laptop
4	Using the remote control	14	Using the projector with a Blu-ray Disc player
5	Using the projector with a DVD player	15	Using the projector with a video camera
6	Using the projector with a video camera	16	Using the projector with a video camera
7	Using the projector with a video camera	17	Using the projector with a video camera
8	Using the projector with a video camera	18	Using the projector with a video camera
9	Using the projector with a video camera	19	Using the projector with a video camera
10	Using the projector with a video camera	20	Using the projector with a video camera
11	Using the projector with a video camera	21	Using the projector with a video camera
12	Using the projector with a video camera	22	Using the projector with a video camera
13	Using the projector with a video camera	23	Using the projector with a video camera
14	Using the projector with a video camera	24	Using the projector with a video camera
15	Using the projector with a video camera	25	Using the projector with a video camera
16	Using the projector with a video camera	26	Using the projector with a video camera
17	Using the projector with a video camera	27	Using the projector with a video camera
18	Using the projector with a video camera	28	Using the projector with a video camera
19	Using the projector with a video camera	29	Using the projector with a video camera
20	Using the projector with a video camera	30	Using the projector with a video camera

The following item is not included with all projector models.



 A line drawing of an EPSON Document CD-ROM. The text on the CD-ROM reads 'EPSON Document CD-ROM'.

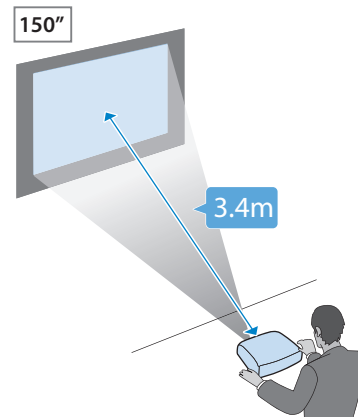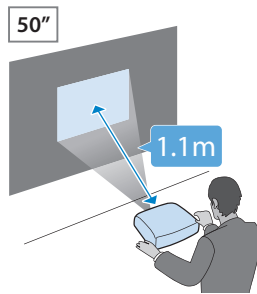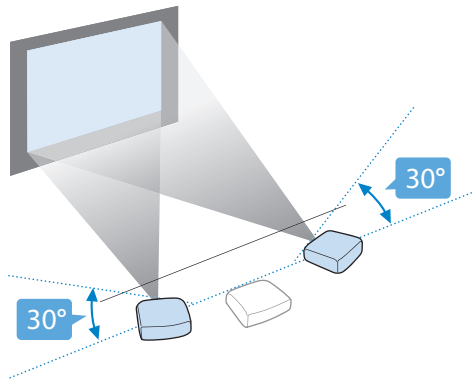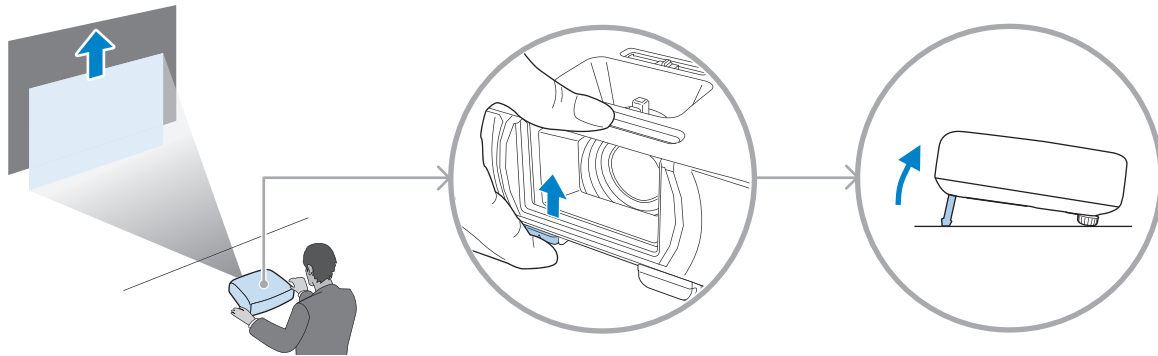    



3

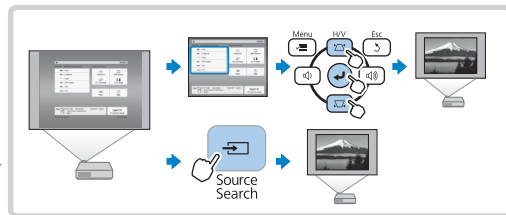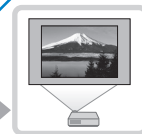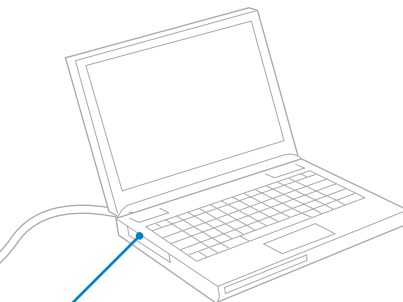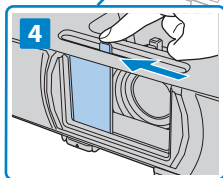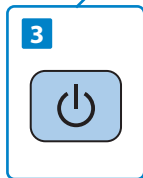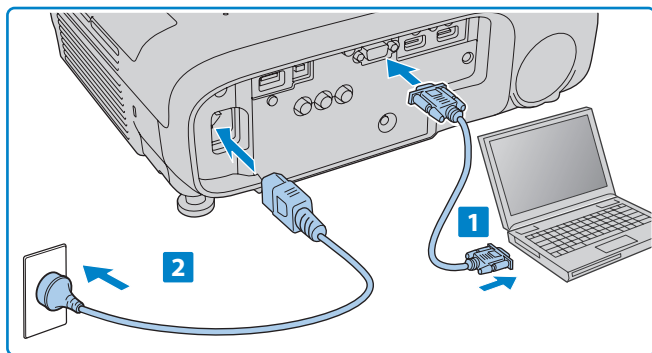       


EH-TW750/EH-TW710

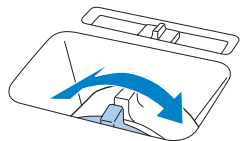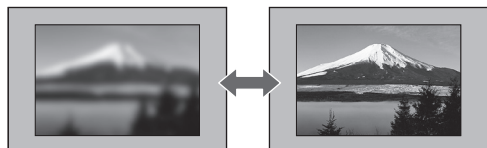  


EH-TW740

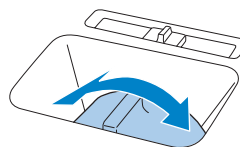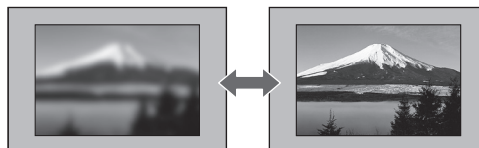  



EH-TW750/EH-TW710

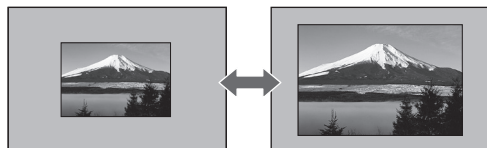 

◀ T W ▶


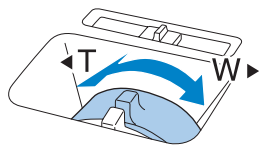 


EH-TW740

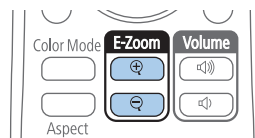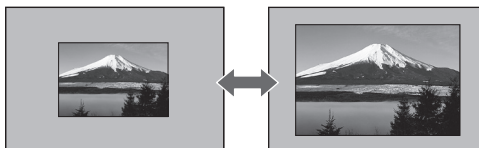  






5 Sec.

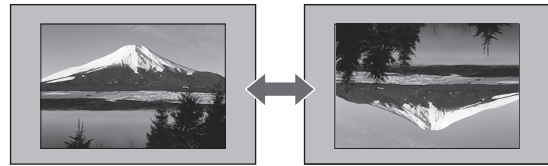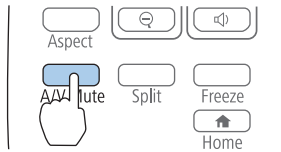  





5

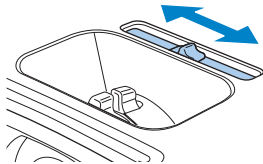 

1

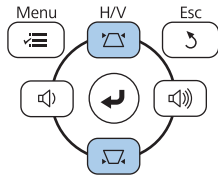  


2

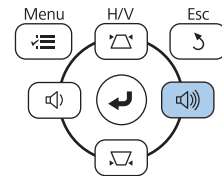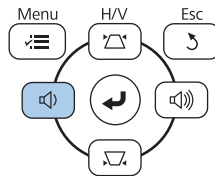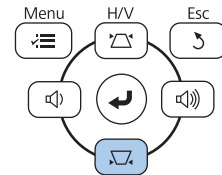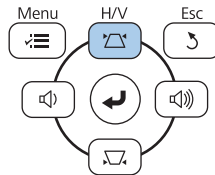    




EH-TW750/EH-TW710

 7

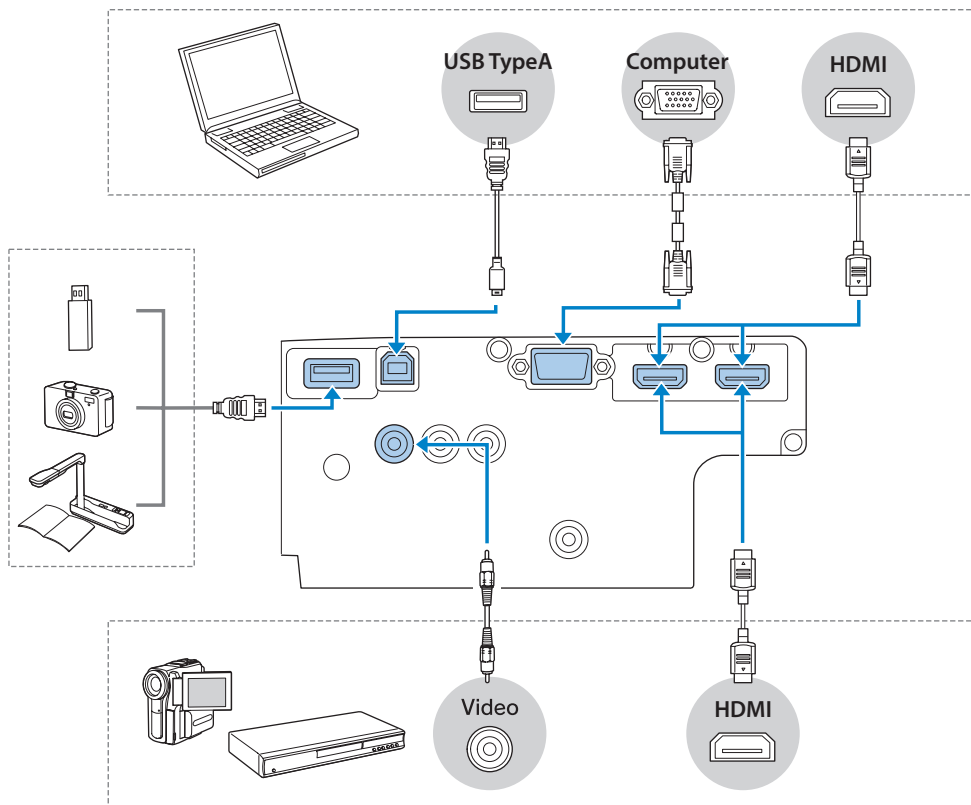

EH-TW740

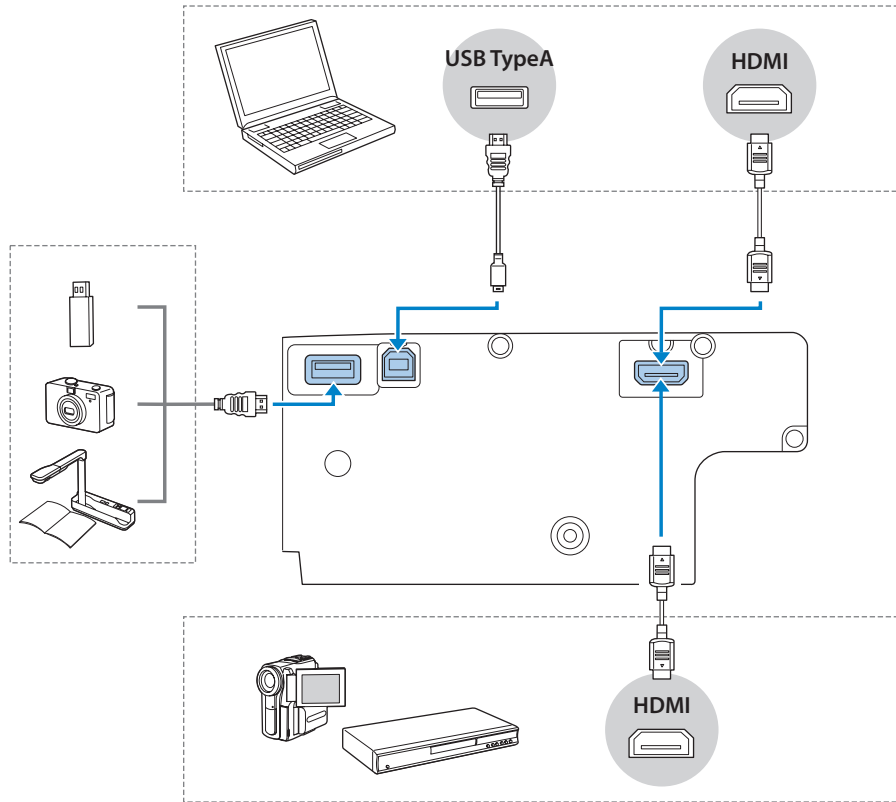 

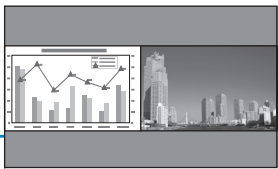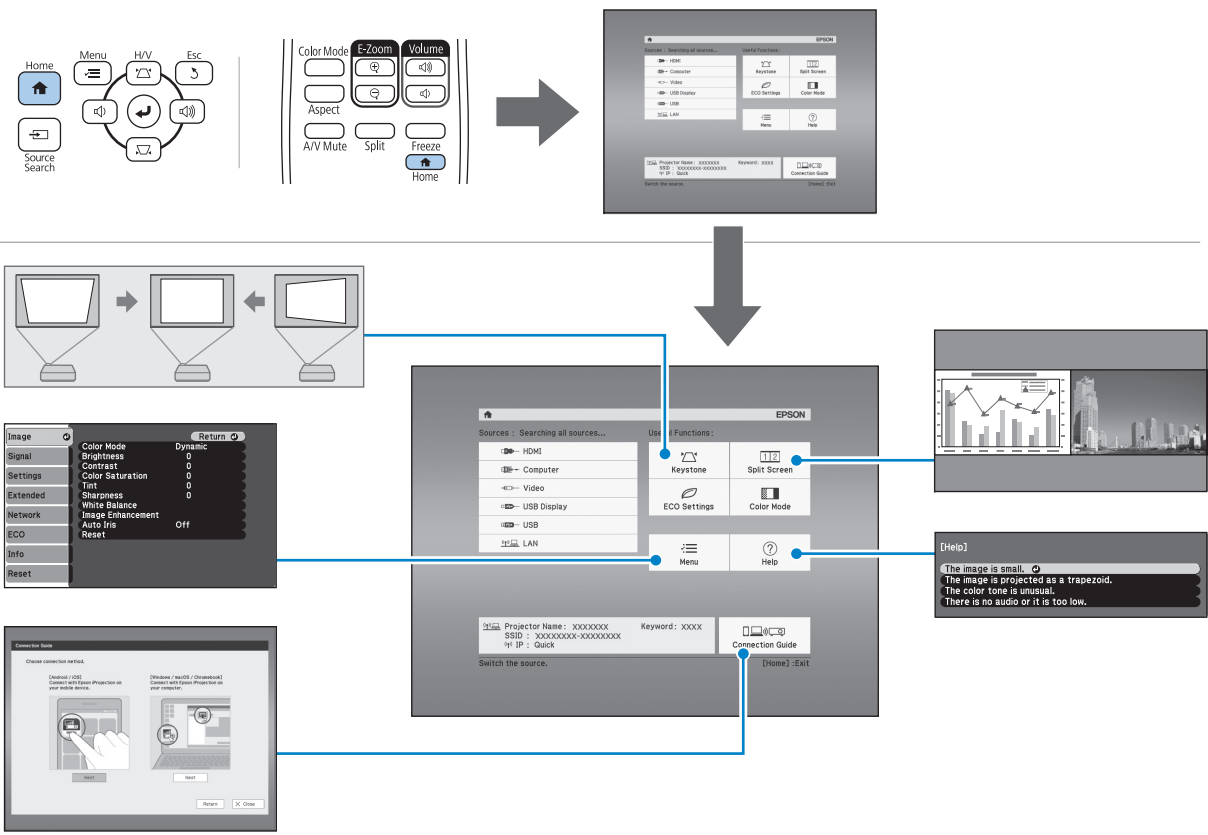  

[Help]
 The image is small.
 The image is projected as a trapezoid.
 The color tone is unusual.
 There is no audio or it is too low.

