
Creating Special Labels


Creating Labels for Patch Panel | Block-66 P.Panel

You can create the optimal labels for your patch panel by setting the label length and number of blocks.

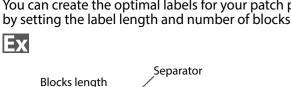

608A

Blocks number

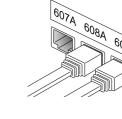

1. Press [Block-66].

607A

2. Select the length type with ___/__ and then press ___. In this example, we will select "Blocks".

609A

Blocks: Sets the length by block length. **Label**: Sets the length by label length.

3. Enter the blocks length and then press . Setting range: 0.25 to 30 cm

4. Enter the blocks number and then press . In this example, we will enter "3". Setting range: 1 to 50

5. Select the type of separator with ___/__ and then press ___. In this example, we will select "Line".

6. Select the orientation with \(\to \) and then press \(\to \). In this example, we will select "Hori.".

607A | 608A | 609A Hori. A906 A806 A106 Vert.1 Vert.2 || | | | | | | | | | | | | | |

7. Enter the text.

You can create labels with sequence numbers. For details, 23 "Creating Labels with Block Sequence Numbers Assigned"


8. Press 🕞


Ex

Creating Labels for Block-66



You can create labels for Block-66 so that large numbers of connectors can easily be identified.

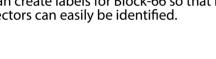

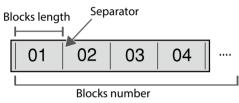

1. Press 🗘 + 8bck-66 .

2. Select the length type with __/_ and then press -. In this example, we will select "Blocks".

Blocks: Sets the length by block length. **Label**: Sets the length by label length.

3. Enter the blocks length and then press -.

Setting range: 0.25 to 30 cm

4. Enter the blocks number and then press -.

In this example, we will enter "4". Setting range: 1 to 50

5. Select the type of separator with ___/_ and then press __ . In this example, we will select "Line".

6. Select the orientation with ___/_ and then press ___. In this example, we will select "Hori.".

607A 608A 609A A906 A806 A406 Vert.2 | | | | | | | | | | | |

7. Enter the text.

You can create labels with sequence numbers. For details, 23 "Creating Labels with Block Sequence Numbers Assigned"


8. Press .

Creating Labels for Faceplate Mix-Len FacePlate



Text can be automatically placed at the center of a block. This enables you to easily create a label suitable for the size of the area where it will be affixed.



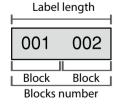

1. Press Mix-Len FacePlate

2. Enter the label length and then press . Setting range: 1 to 99.9 cm

3. Enter the blocks number and then press -. In this example, we will enter "2". Setting range: 1 to 50

4. Select the orientation with \(\to \) and then press \(\to \). In this example, we will select "Hori.".

001 002 000 00-Vert.1 **Vert.2** | 5 8 8


5. Enter the text.

6. Press

Creating Labels for Punch Block RBlock

You can create labels to identify at a glance the numbers for the wires or pins connected to a punch block.



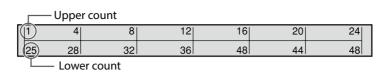

1. Press Raick .

2. Select the blocks type with __/_ and then press __ . In this example, we will select "4pairs".

Blank: Creates a table of two rows and one column.

3. Select the text type with \(\to \) \(\to \) and then press \(\to \). In this example, we will select "Pins".



4. Enter the upper count and then press . In this example, we will enter "1".

5. Enter the lower count and then press . In this example, "25" is entered automatically.

6. Enter the label length and then press . Setting range: 1 to 99.9 cm


7. Press

Creating Labels to Wrap Around Cable



You can repeatedly print text so that it can be seen regardless of the angle from which the cable is viewed.



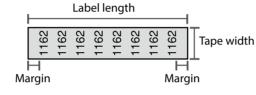


1. Press [Hag Wrap].

2. Select the length type with \(\to \) and then press \(\to \). In this example, we will select "Length".

Dia: Sets the length by cable diameter. (Setting range: 0.25 to 15 cm) **Length:** Sets the length by label length.

3. Enter the label length and then press . Setting range: 1 to 99.9cm

4. Select On or Off of repeat text with ___/_ and then press ___. In this example, we will select "On".

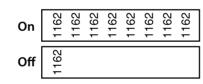

5. Select the type of margins with \(\rightarrow \) and then press \(\rightarrow \). In this example, we will select "Long".

6. Enter the text.


7. Press 📆 .

Ex


001 002


Creating Labels to Wrap around Cable



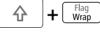

This label is useful for differentiating cables because the flag portion of the label wrapped around the cable is easy to see.

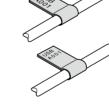

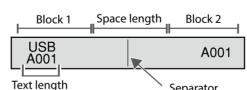

Text length 1. Press 🗘 + 🖓 →

2. Select the setting method of space length with ___/_ and then press 🛂

In this example, we will select "Length".

Dia: Sets the length by cable diameter. (Setting range: 0.25 to 15 cm) **Length**: Sets the length by space length.

3. Enter the space length and then press . Setting range: 0.25 to 30 cm

4. Enter the text length and then press . Setting range: 0.25 to 30cm

5. Select the type of separator with ___/_ and then press __ . In this example, we will select "Line". 6. Select the orientation with ___/_ and then press ___.

In this example, we will select "Hori.2".


HOTI. I	A001	A001
Hori.2	USB A001	A001
Vert.1	USB A001	USB A001
Vert.2	USB A001	A001

7. Enter the text of block 1.

8. Enter the text of block 2.

9. Press 🕞 .

Creating Multiple Labels at Once

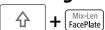


You can create many labels at once.



001 002 003

004 005 006

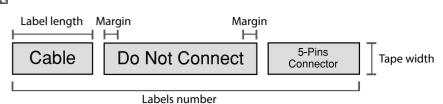

1. Press ↑ + Mintell .

Auto: Automatically adjusts the label length depending on the length of text. **Set**: Sets the label length. Setting range: 1 to 99.9 cm

3. Enter the labels number and then press . In this example, we will enter "3".

4. Select the type of margins with ___/_ and then press __. 5. Select the orientation with ___/_ and then press ___.

2. Select the label length with __/_ and then press __ .

In this example, we will select "Hori.". Hori. 012

Vert.1 ○-∾ Vert.2

6. Enter "Cable" and then press .


Similarly for other labels, enter text and press

7. Press

Creating Sequentially Numbered Labels

The number is automatically incremented each time a label is printed. Up to four digits including numbers (0 to 9) and alphabet letters (a to z and A to Z) can be entered.



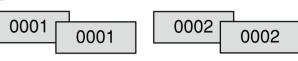

1. Press

2. Enter the start value of the sequential numbers and then press -. In this example, we will enter "0001".

0003

0003

3. Select the number of repetition with ___/_ and then press ___. In this example, we will select "2 times".


4. Press 🖈 + 🗒 .

5. Select "Print copies" with \(\bigcirc \rightarrow \) and then press \(\bigcirc \cdot \).


6. Enter the number of print copies and then press . In this example, we will enter "6".

7. Select "Start print?" with ___/__ and then press ___. Printing starts.

Creating Labels with Block Sequence Numbers Assigned

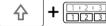

You can assign sequential numbers to blocks. Up to four digits including numbers (0 to 9) and alphabet letters (a to z and A to Z) can be entered.

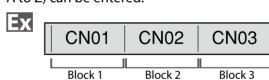

Create the blocks in advance. In this example, we have created three blocks.

1. Press 中 + 1223 .

2. Enter the start value of the sequential numbers and then press . In this example, we will enter "CN01". Sequential numbers are automatically assigned to block 2 and block 3.

3. Select the number of repetition with ___/__ and then press ___. In this example, we will select "1 time".

4. Press .

Creating Labels with Symbol ★△⊗

1. Press ★△ঌ.

2. Select a category with \(\bullet \) \(\bullet \) and press \(\bullet \).

3. Select a symbol with ____/__ and press ___.

4. Press 🕞 .

MEMO

• For available symbols, see "Symbol List" on the separate sheet. • If you transfer your original symbols from your computer, the symbols are saved in the "Downloaded" category. For more details, see LW-Z700 User's Guide (PDF version), which is available from your local Epson website.

Creating Barcode Labels [1231

MEMO

· You may not be able to add a barcode depending on the label type you create.

Only up to two barcodes can be inserted in one label.



Supported barcode types:

EAN-8, EAN-13, CODE128, CODE39, QR CODE, ITF, CODABAR, UPC-A, UPC-E

1. Press 🕎 .

2. Select an item with ___/_ and press -. Move on to the next options until the setting is complete.

3. Enter the alphanumeric characters for the barcode and then press .

4. Press

Customizing Labels

Setting the Format and Style (Edit menu)

You can decorate your label by setting the following.

MEMO

The setting items displayed when you press and differ depending on the label type you create.

Layout

Left, Center, Justify, Right

Adjusts the layout when multiple lines are used.

Decorates the text with a frame or inserts a table.

Style

Outline, Normal, Shadow, S+O Applies a character style to text.

Char. spacing

None, Narrow, Normal, Wide Sets the inter-character spacing.

Border & Line

Strikeout, Underline, None, Border, Round brdr, Shading, Brdr mesh, Round mesh

Applies border, underline, shade etc. to text.

Char. Width

Smaller, Small, Narrow, Normal, Wide

This allows you to change the width or height of characters.

Bold & Italic

Italic, Normal, Bold, B+I

Changes the text in bold or italics.

Length

This setting is the same as when lie pressed.

Margins

This setting is the same as when is pressed.

Orientation

|AB|A, $|< \infty|$

Sets the orientation of the text.

ABC AB A

Font size

This setting is the same as when is pressed.

Font

This setting is the same as when + Law is pressed.

Procedure for setting

1. Place the cursor.

Place the cursor on the left of the characters to which you want to apply a function. If you apply the function to a specific line or block, confirm that the cursor is in the line or block.

2. Press (△△).

Example: to apply "Bold & Italic"

- 3. Select "Bold & Italic" with ___/_ and press
- 4. Select "B + I" with \(\to \) and press \(\to \).
- 5. Select an area to which you want to apply the function with ___/_ and press ___

When "Character" is selected, the function is applied to all characters on the right of the cursor.

Changing the Font Size [AAA]

You can change the font size of text or a block line by line. Among the preset setting items, select one with the same number of lines as that of the text or block you want to change.

You may not be able to change the font size depending on the label type you create.

- 1. Press AAA.
- 2. Each time you press , the font size changes.

Changing the Font

Changes the font type of text.

- 2. Each time you press 🖈 + 🖳, the font changes.

ABC SansS. **ABC** Roman

Changing the Text Orientation

Changes the text orientation to vertical or horizontal.

MEMO

You may not be able to change the text orientation depending on the label type you create.

1. Press 🙃 + 🕮 .

Each time you press 🖈 + 🔙, the setting switches between "Horizontal" and "Vertical".

ABC Horizontal Vertical CBA

When creating "Patch Panel", "Block-66", "Faceplate", or "Mix-Len"

- 1. Press 🗘 + 🖼 .
- 2. Select the orientation with ___/_ and press -.

Hori. Vert.1 < □ ○ Vert.2

Setting the Label Length

You can set the length of label or block.

MEMO

When creating a special label, you can set the length again.

- 1. Press .
- 2. Select the setting method of the length with ☑/☑ and press ☑.
 - Auto: Automatically adjusts the label length depending on the length of text.
 - Set: Sets the label length. Setting range: 1 to 99.9 cm
- 3. Select the alignment for the text with \(\to \) and press - .

Left, Center, Justify, Right

Setting the Margins | = AB

Sets the left and right margins.

MEMO


You may not be able to set the margins depending on the label type you create.

- 1. Press
- 2. Select the type of margins with \(\sum \) and press \(\sum \).

Adding Block Column

By dividing text into blocks, you can change the style and the number of lines block-by-block.

Display ■ Cable **2**#101 1 USB No.1 2 USB No.2

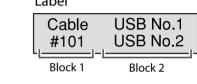

1. Press Column .

A new block is started from the character next to the cursor.





Saving Frequently Used Labels 🗈

By saving frequently used labels, you will be able to easily recall and print from them next time. Up to 100 labels can be saved.

■ Saving a label

- 1. Press 🗁 .
- 2. Select "Save with and press.
- Select a registration number with \(\subseteq \setminus \) or the number keys and then press 🗾.
 - The registration confirmation screen appears.
- 4. Confirm the registration number and then press .

■ Recall the saved label

- 1. Press 🗁 .
- 2. Select "Recall " with \(\rightarrow\) and press \(\rightarrow\).
- 3. Select a registration number with ___/__ or the number keys and then press .
- The recall confirmation screen appears. 4. Confirm the registration number and then press - .

■ Deleting the saved label


- 1. Press 🗁 .
- 2. Select " Delete" with ___/__ and press ___.

4. Confirm the registration number and then press .

- 3. Select a registration number with ___/__ or the number keys and then press 🗾
 - The deletion confirmation screen appears.

■ Enlarge print

Utilizing Print Functions

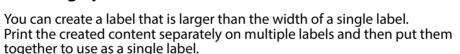



- 1. Press 🖟 + 👺
- 2. Select "Enlarge print " with \(\to \) and press \(\to \).
- 3. Select " *2size " with \(\rightarrow \rightarrow \) and press \(\rightarrow \).
- 4. Select " 2/2 " with \(\to \) and press \(\to \).
- 5. Select "Start print? " with \(\to \) and press \(\to \). Printing starts.

MEMO

The function remains enabled even after printing. To disable the function, select "Off".

■ Mirror print

ABC ABC

- 1. Press 🕁 + 🗒
- 2. Select "Mirror print " with \(\to \) and press \(\to \).

4. Select "Start print? " with \(\rightarrow \rightarrow \) and press \(\rightarrow \).

3. Select "On " with \(\to \) \(\to \) and press \(\to \).

Printing starts.

MEMO The function remains enabled even after printing. To disable the function, select "Off".

■ Print copies

ABC ABC ABC

- 1. Press 🔄 + 🕞 .
- 2. Select "Print copies " with ___/_ and press __.
- 3. Enter the number of print copies and then press .
- 4. Select "Start print? " with \(\rightarrow\) and press \(\rightarrow\). Printing starts.

The function remains enabled even after printing. To disable the function, set the number of print copies to "1".

Changing the Printer Settings

Auto cut

Auto cut:

Sets whether or not to cut automatically.

When "Auto cut" is set to "On", the function "Half cut" for precutting just the label part to make the backing paper easy to peel off can be set.

Print density

Sets the print density.

Drop stop

This function is useful for affixing consecutively printed labels one at a time. Select "On" to avoid a printed label from dropping. A printed label stays at the

tape eject slot. When printing multiple copies, printing of the second or later labels starts each time you remove a printed label.

This function is only available when the label length is 28 mm or more, "Auto

cut" is set to "On", and "Half cut" is set to "Off".

Sets the display backlight to On or Off.

Language

Backlight

You can select the language shown on the display from the following: Dansk, Deutsch, English, Español, Français, Italiano, Nederlands, Norsk, Português-Br, Português-EU, Suomi, Svenska, Türkçe

inch:cm

The unit of length used to indicate the label size can be switched between inch and cm.

Version: To make sure the version number that has been installed in the printer.

Procedure for setting

- 1. Press 🛈 + ₩֎.
- 2. Select the desired function with __/_ and press __.
- 3. Select the desired item with __/_ and press __.