


# User's Guide

— for use without a computer —


## Loading Paper

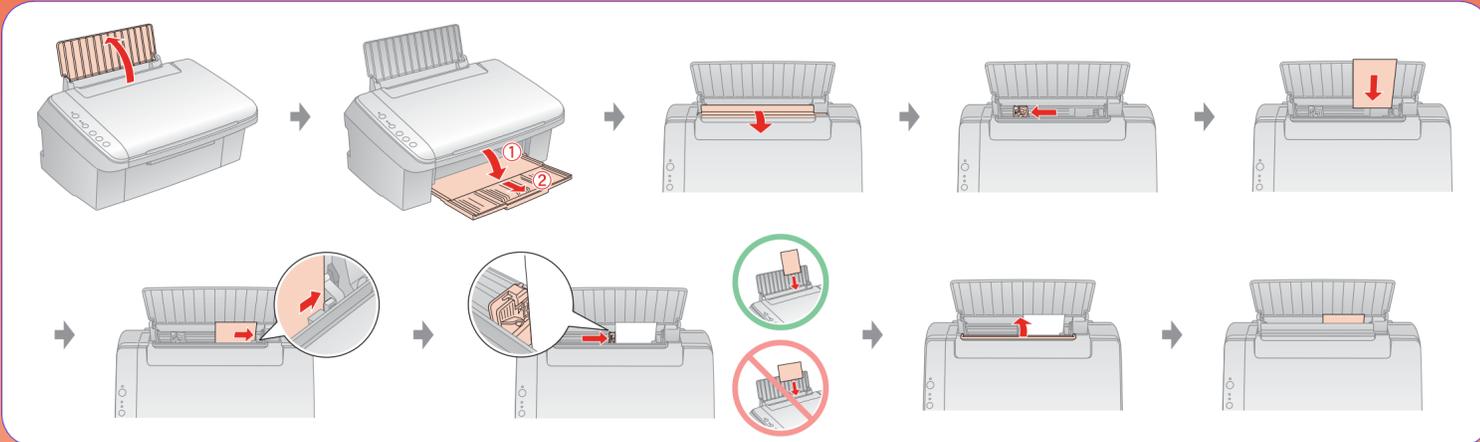



## Loading Capacity

Available Paper	Paper Size	Sheets
Plain Paper	A4	80
Epson Premium Ink Jet Plain Paper		
Epson Bright White Ink Jet Paper		
Epson Premium Glossy Photo Paper	10 x 15 cm (4 x 6 in.)	20
Epson Premium Semigloss Photo Paper		
Epson Glossy Photo Paper		
Epson Ultra Glossy Photo Paper		



## Placing an Original

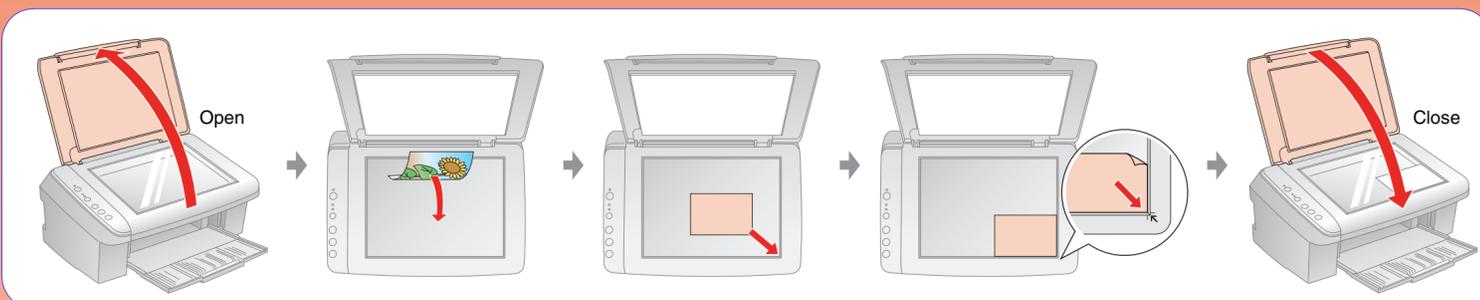

## Copying

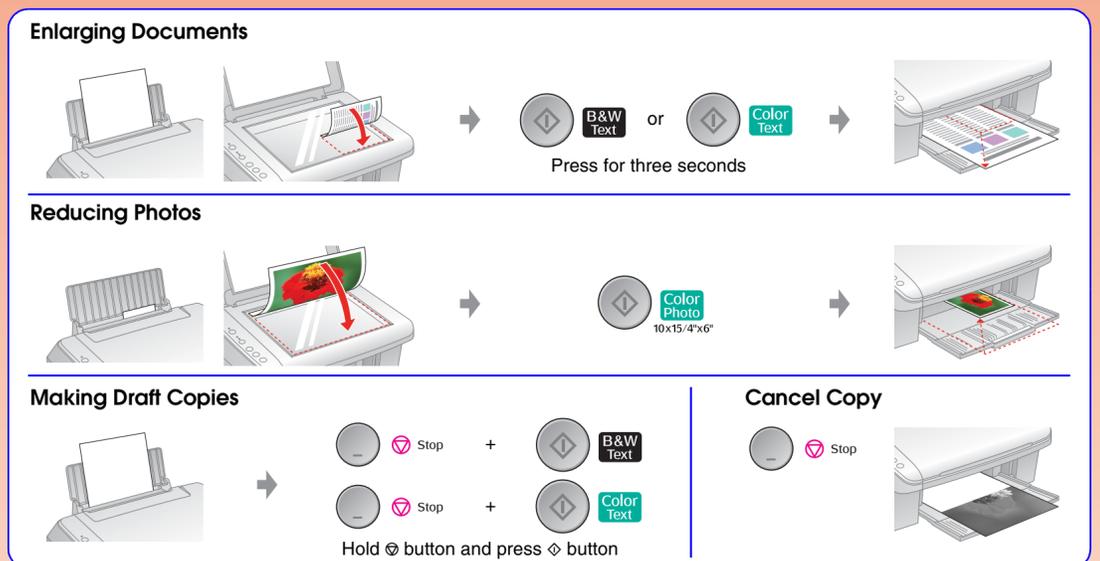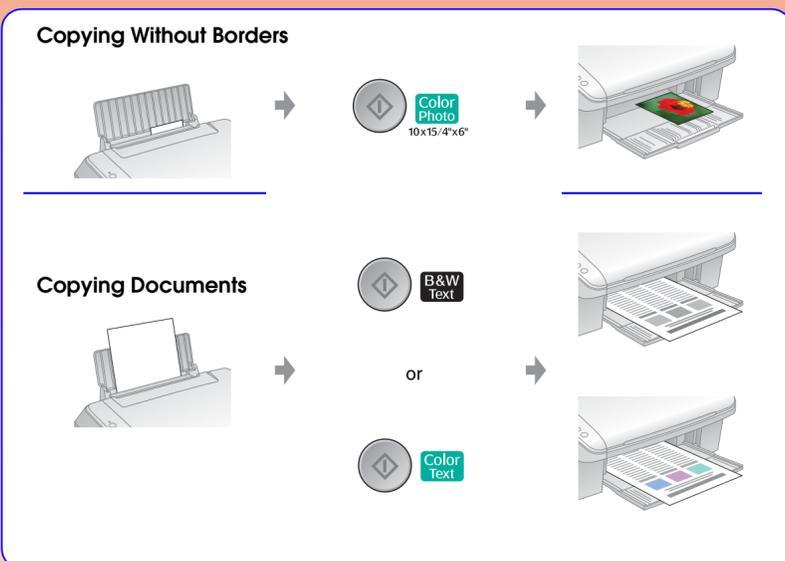

## Replacing Ink Cartridges

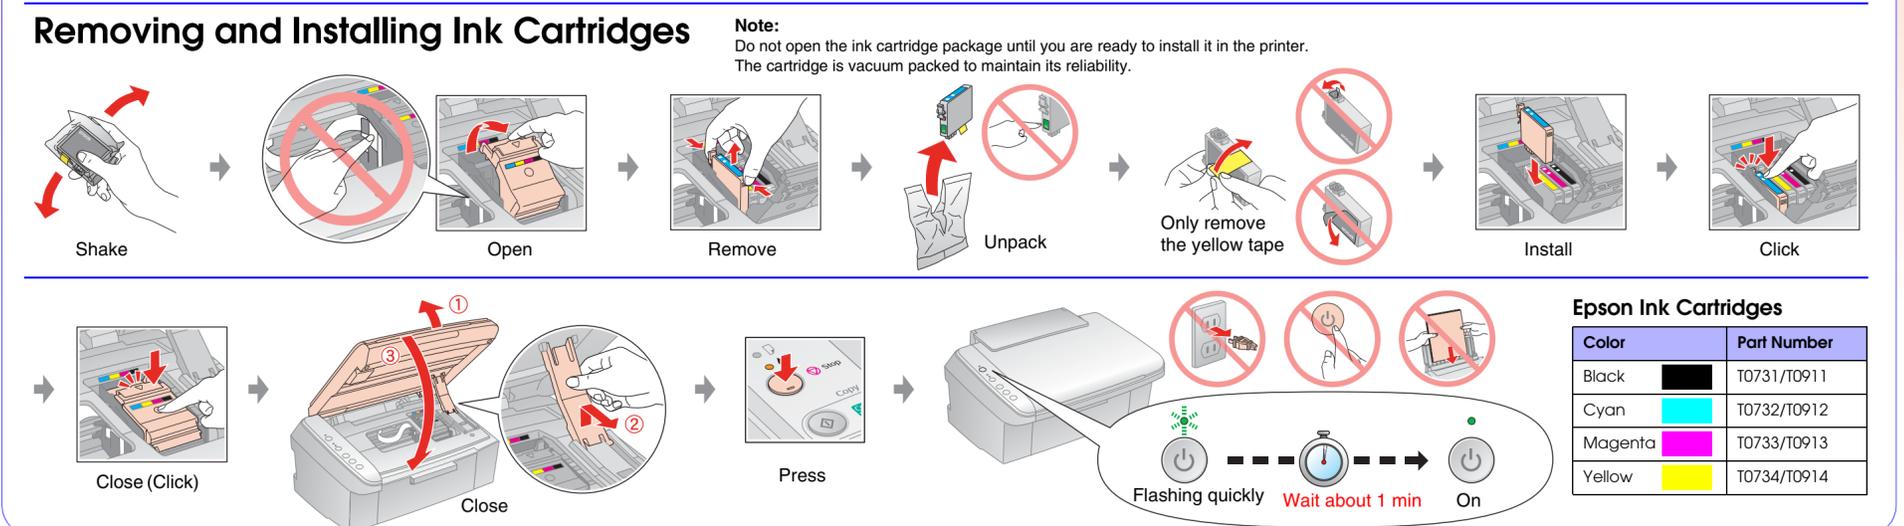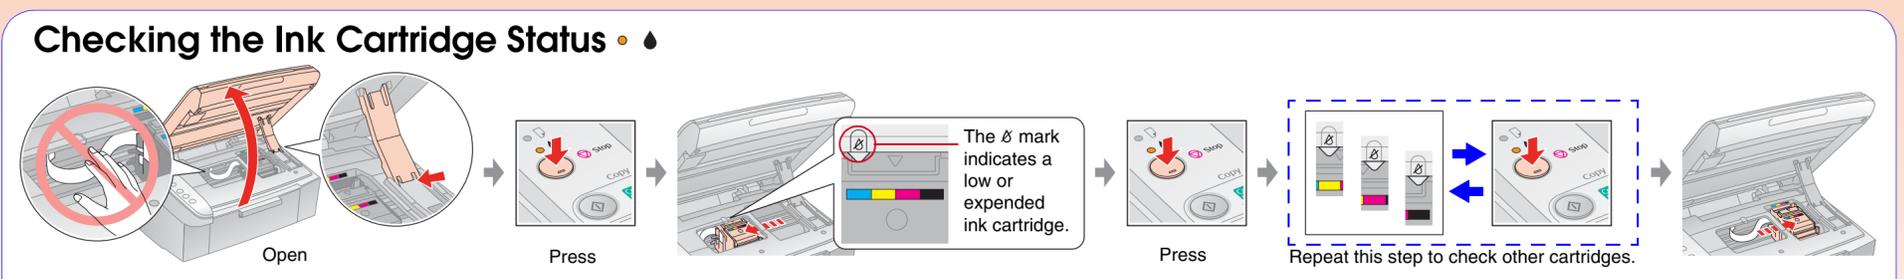

### Epson Ink Cartridges

Color	Part Number
Black	T0731/T0911
Cyan	T0732/T0912
Magenta	T0733/T0913
Yellow	T0734/T0914



# Troubleshooting





## Error Indicators

Flashing light icon = Flashing, ● / ● = On

Lights	Cause	Solution
●		   or  or  → See <b>Loading Paper</b> on the front page.
Flashing ●		Prepare a new ink cartridge.
●		  → See <b>Replacing Ink Cartridges</b> on the front page.
●		If the light is still on or flashing after you replace the cartridge, try the procedure below.   
Flashing ●	Sleep mode	Press any button except the  button to wake the product.
Other lights off		

Lights	Cause	Solution
●		 If the paper is not ejected, try the procedures below.  Turn off or  Turn off 
All lights flashing		A serious error has occurred. Contact your dealer.
All lights on	Waste ink pad in the printer is saturated.	Contact your dealer to replace it.

## Copy Problems

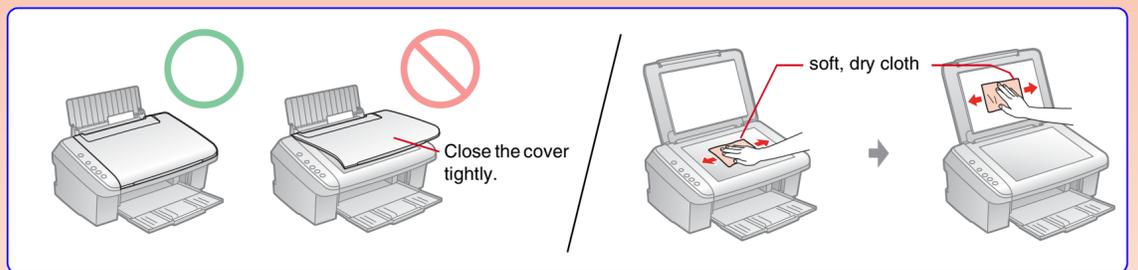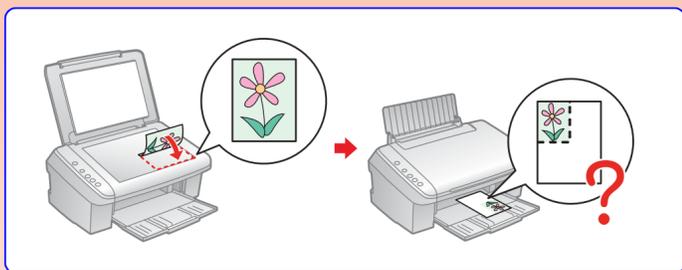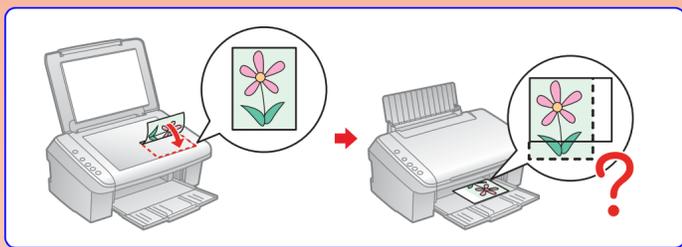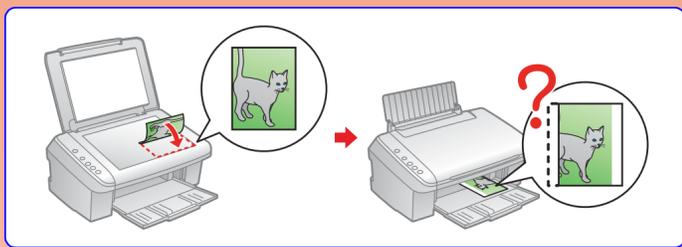

Problem with printout  
→ Run a nozzle check

<b>Good printout</b>	<b>Banding</b>
<b>Faint</b>	
<b>Colors missing</b>	

### 1. Nozzle Check

Turn off

Hold down the button and then press the button. Hold down both buttons until the light begins to flash, then release the buttons.

### 2. Print Head Cleaning

● is off  
Press for three seconds

Flashing → Wait → On

→ Try 1. Nozzle Check