

Home Projector

EF-11

EPSON[®]
EXCEED YOUR VISION




Quick Start Guide
Kurzanleitung
Guide de démarrage rapide
Guida di avvio rapido
Guía de inicio rápido
Guia de Referência Rápida
Introductiehandleiding
Introduktion
Pika-aloitusopas
Hurtigveiledning

Snabbstartsguide
Úvodní příručka
Bevezetés
Przewodnik szybkiego startu
Stručná příručka
Ghid de pornire rapidă
Οδηγός γρήγορης εκκίνησης
Hızlı Başlangıç Kılavuzu
Priročnik za hitri zagon
Kratke upute

Руководство по быстрой установке
Коротка інструкція "Початок роботи"
Қысқаша іске қосу нұсқаулығы
빠른 시작 가이드







دليل البداية السريعة

設定手冊
設定説明書

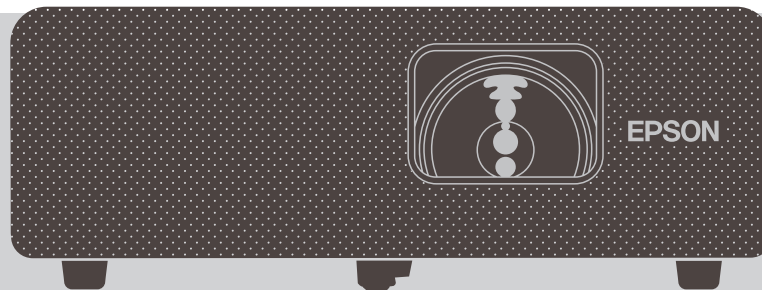


HDMI[™]
HIGH DEFINITION MULTIMEDIA INTERFACE


Included items

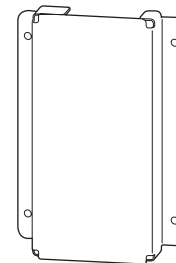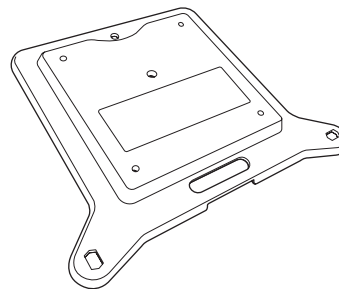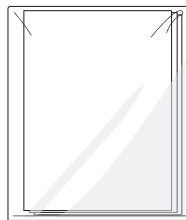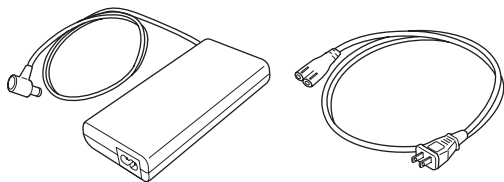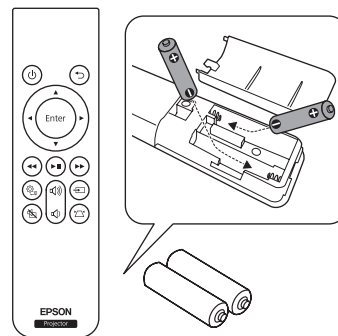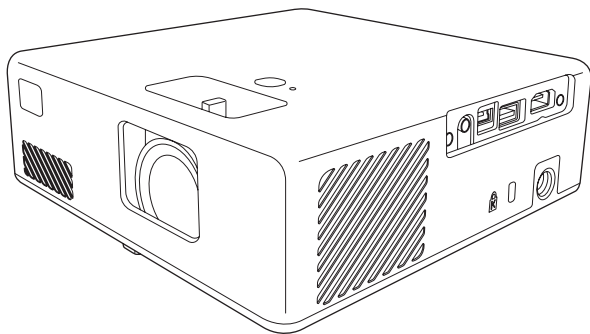





Connecting

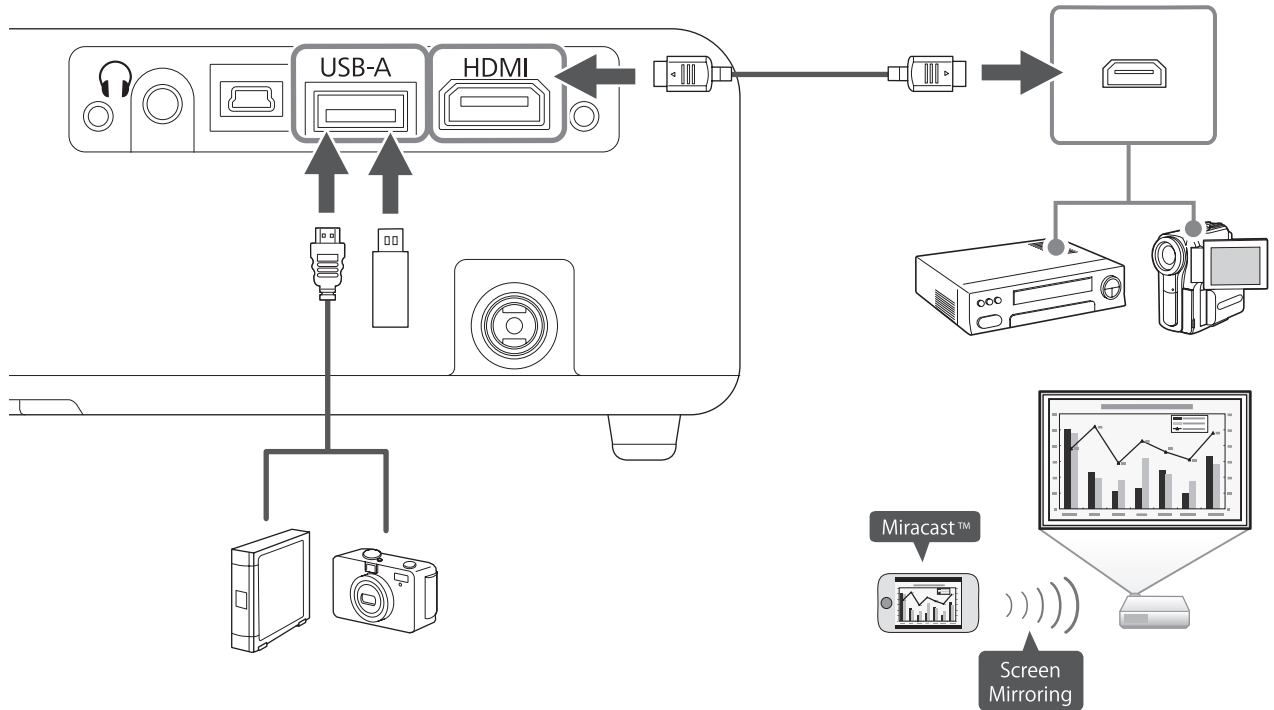




1 Turn on the projector


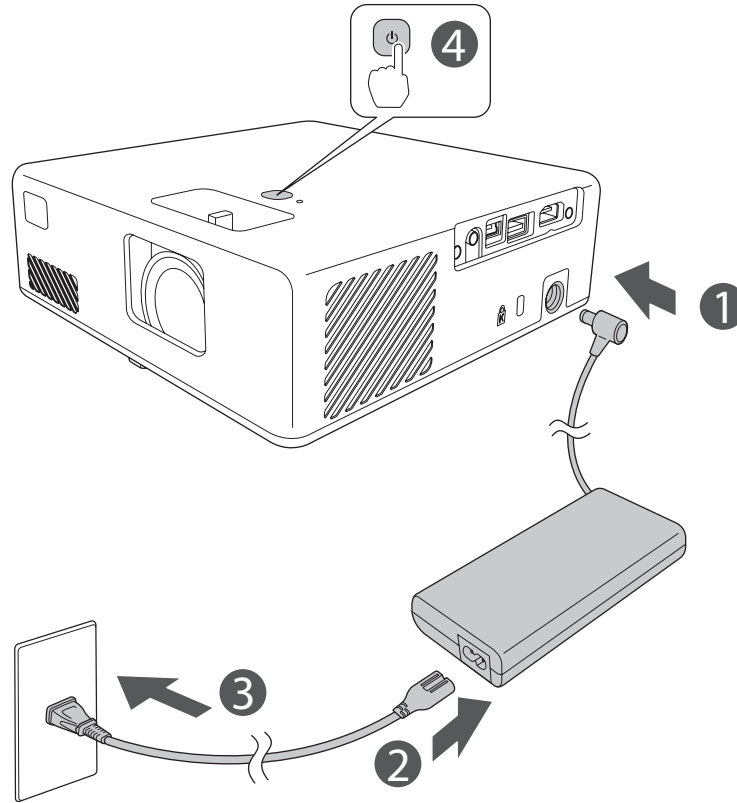


2 Install the projector

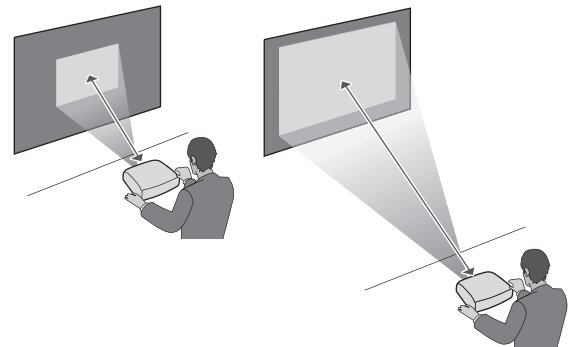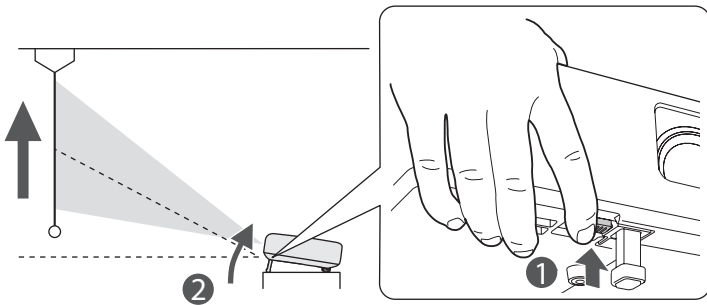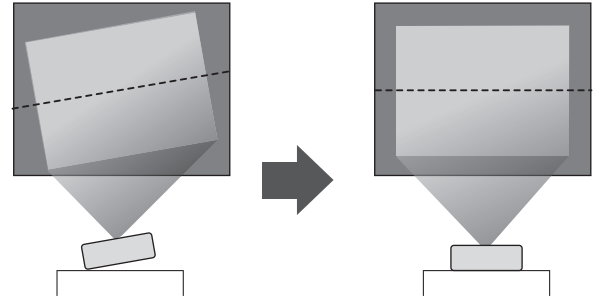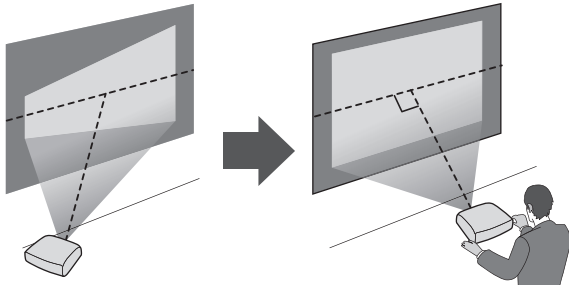


3 Correct the image

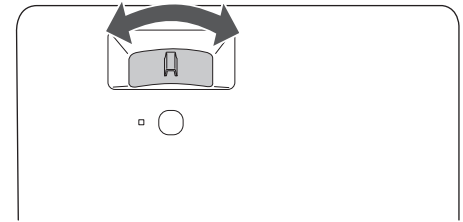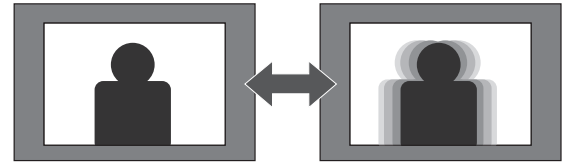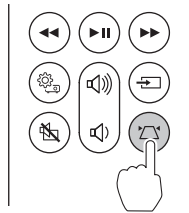

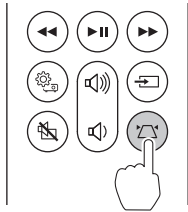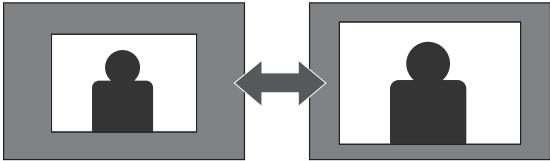

For more information

epson.sn 

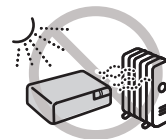

HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

© 2020 Seiko Epson Corporation



414044700