


Home Projector

EH-TW9400W

EH-TW9400

EH-TW8400W

EH-TW8400





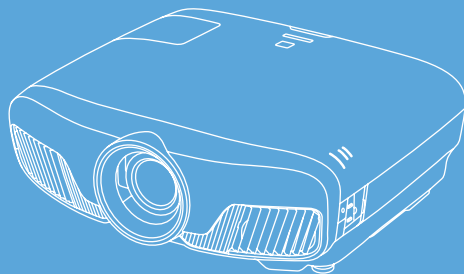


EN	Quick Start Guide	SK	Stručná příručka
DE	Kurzanleitung	RO	Ghid de pornire rapidă
FR	Guide de démarrage rapide	EL	Οδηγός γρήγορης εκκίνησης
IT	Guida di avvio rapido	TR	Hızlı Başlangıç Kılavuzu
ES	Guía de inicio rápido	SL	Priročnik za hitri zagon
PT	Guia de Referência Rápida	HR	Kratke upute
NL	Introductiehandleiding	RU	Руководство по быстрой установке
DA	Introduktion	UK	Коротка інструкція "Початок роботи"
FI	Pika-aloitusopas	KK	Қысқа іске қосу нұсқаулығы
NO	Hurtigveiledning	KO	빠른 시작 가이드
SV	Snabbstartsguide	AR	دليل البداية السريعة
CS	Úvodní příručka	HE	מדריך להפעלה מהירה
HU	Bevezetés	ZHS	設定手冊
PL	Przewodnik szybkiego startu	ZHT	設定説明書






Unpacking

 1

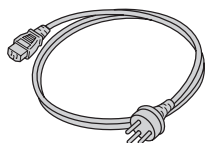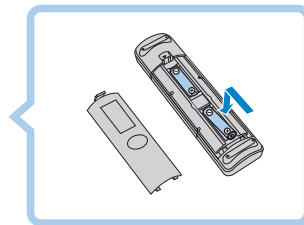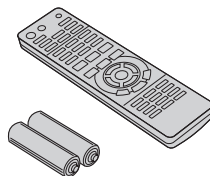
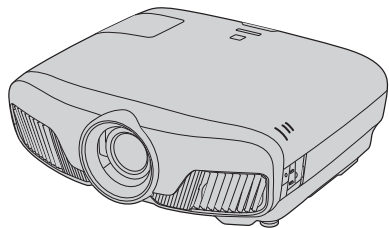


EH-TW9400W/EH-TW8400W only

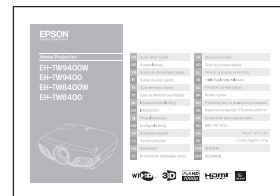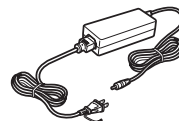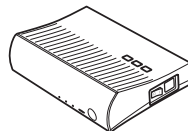


Setting Up


■ Projection Position

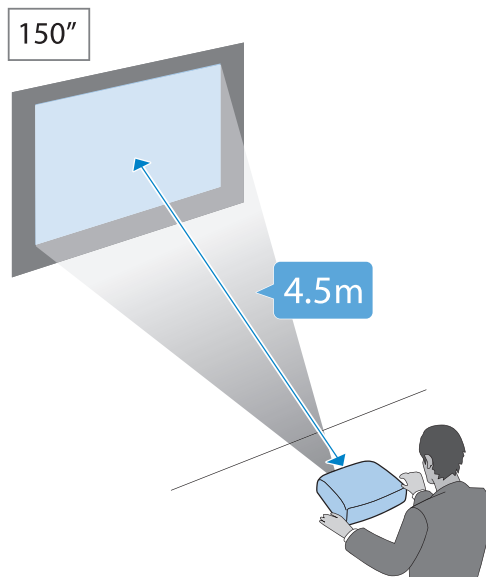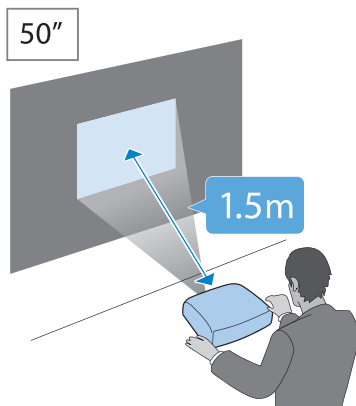

■ Connecting a Device

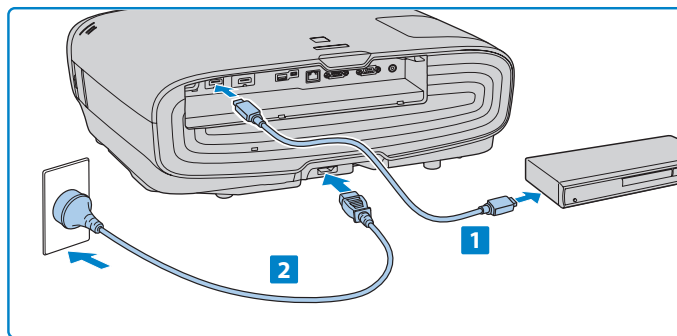

3

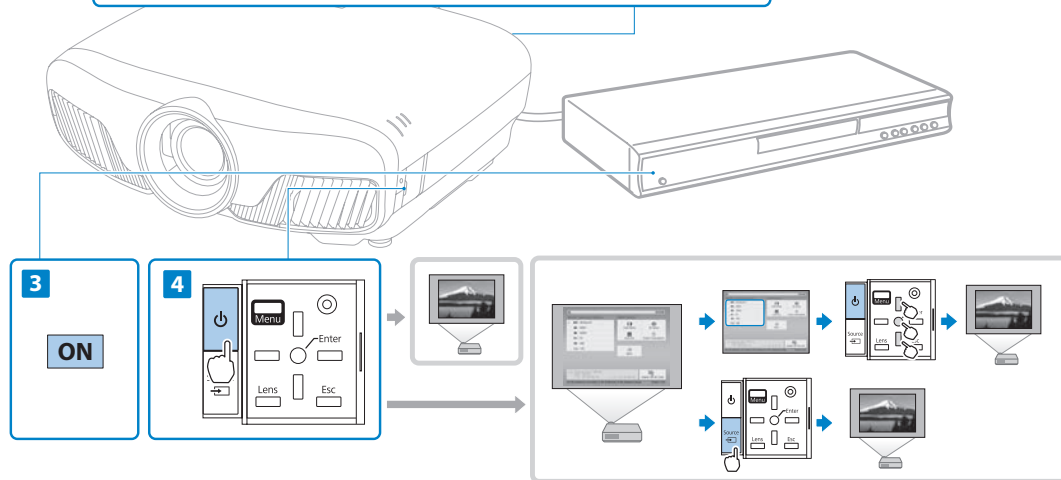

Adjusting


■ Focusing



■ Zooming




■ Adjusting Lens Shift

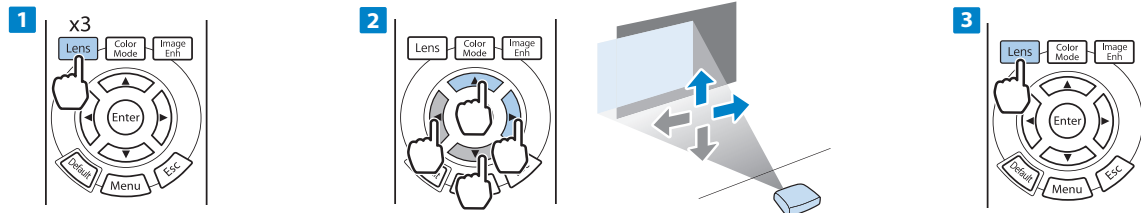



Connecting

5

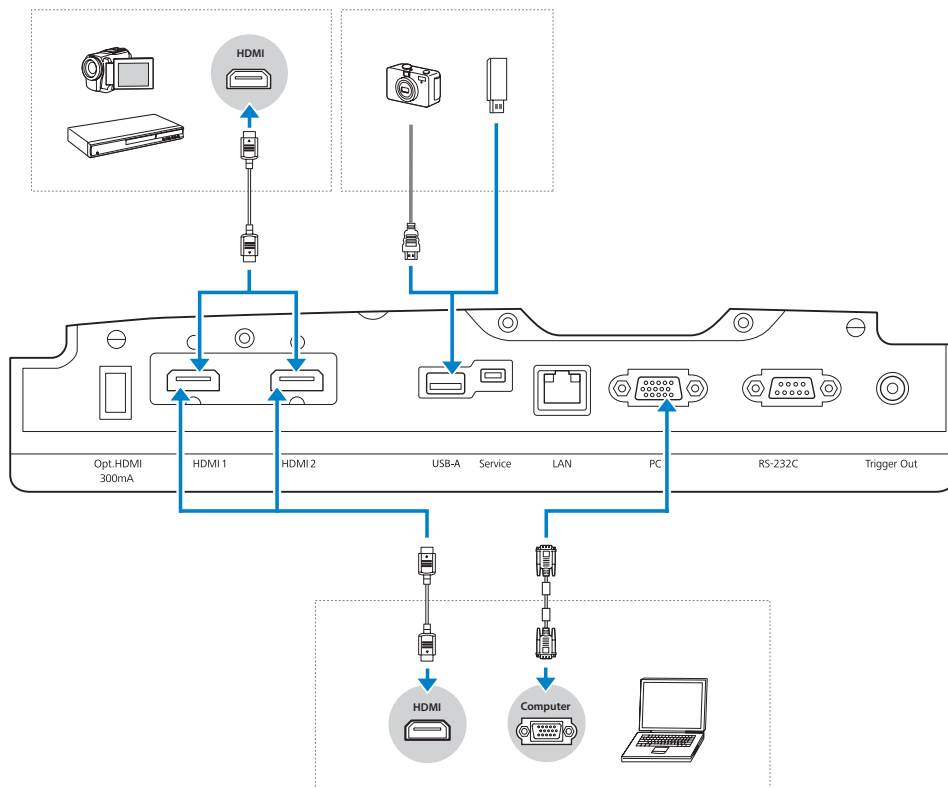


WirelessHD Transmitter (EH-TW9400W/EH-TW8400W only)


■ Installing

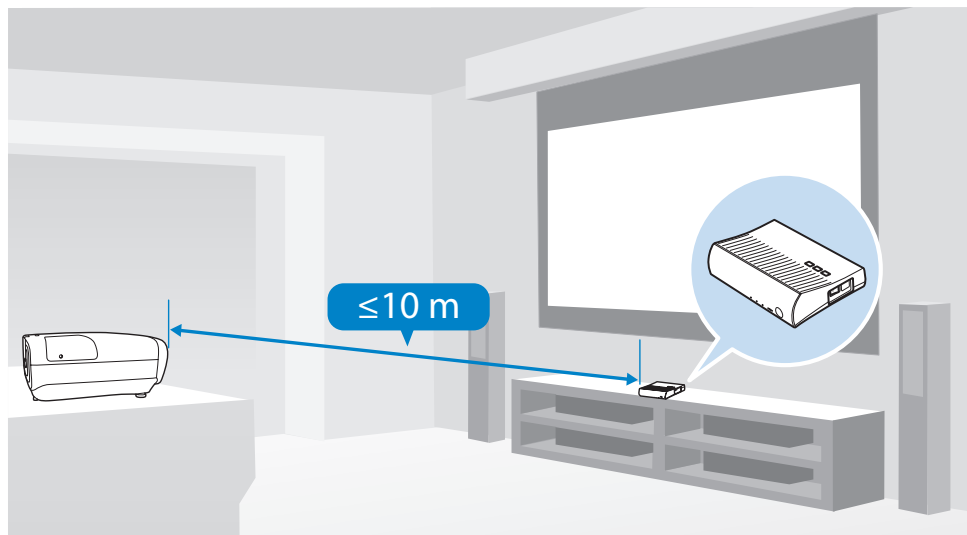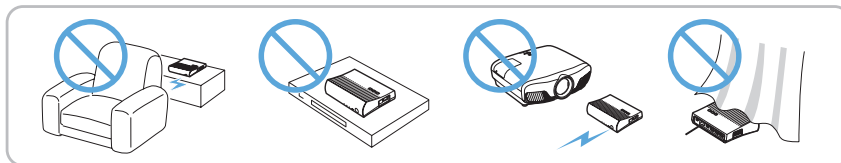


■ Connecting

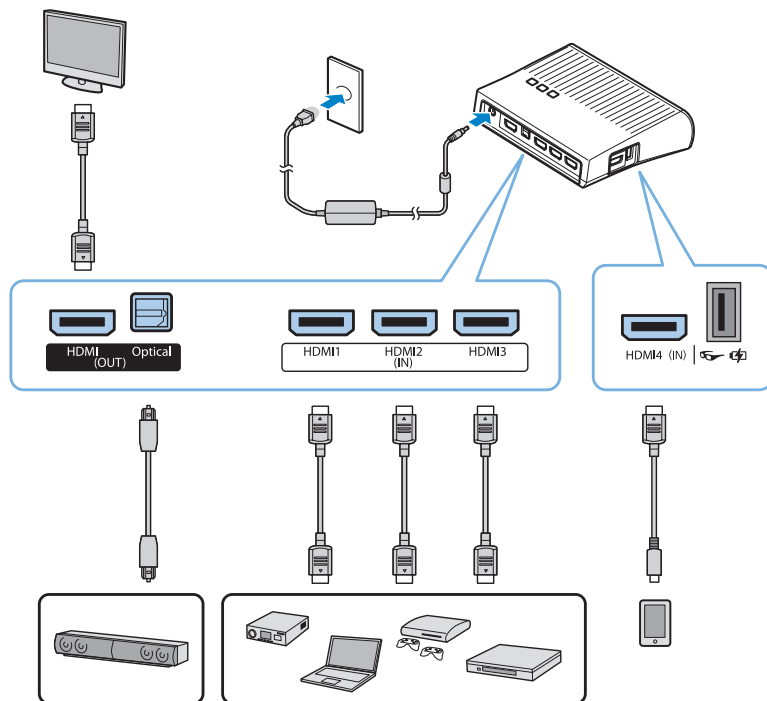


■ Turning On

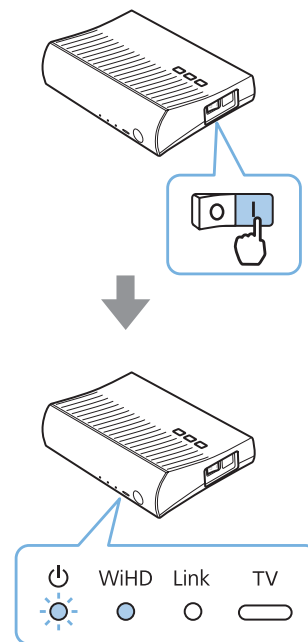



■ Switching the Input

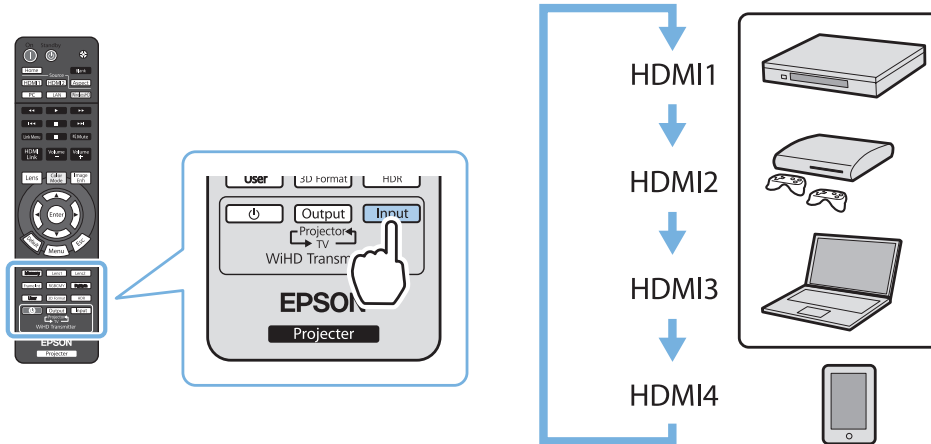

■ Switching the Output

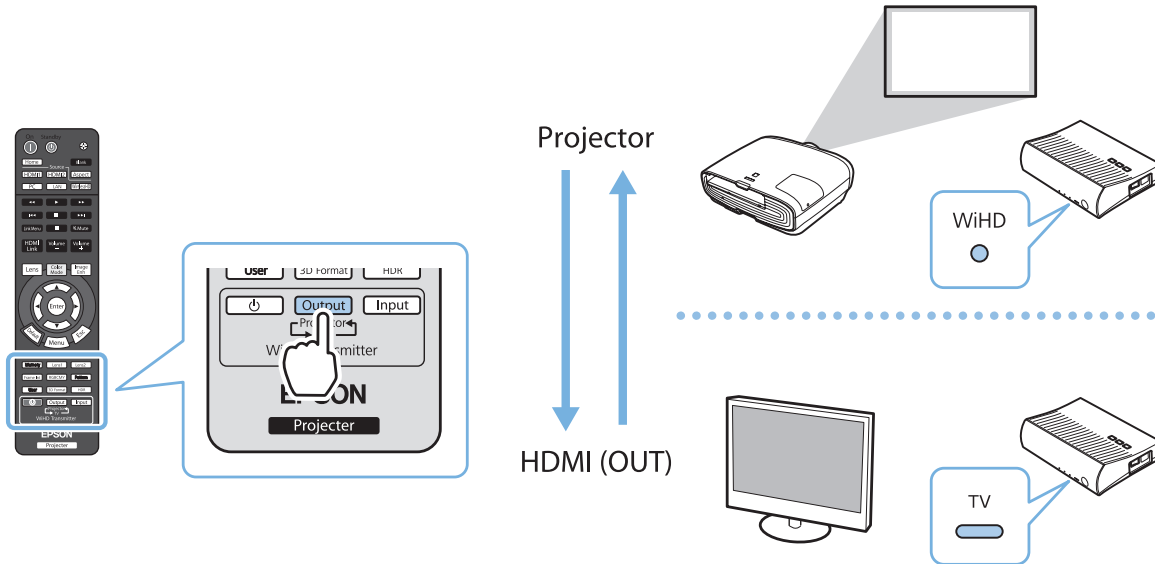

For More Information

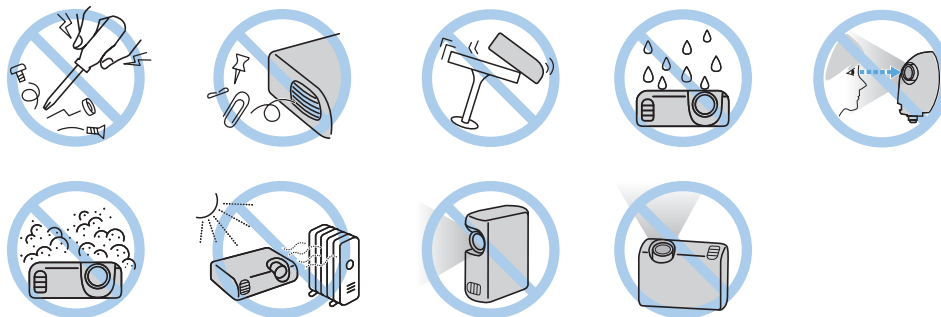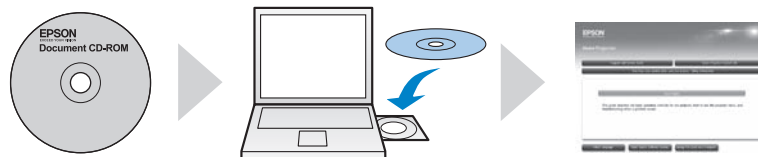

Printed in China
XX.XX-XX(XXX)



413598500