



# LABELWORKS LW-C410

## Setup Guide Panduan Persiapan ข้อแนะนำการติดตั้ง 安装指南 셋업 가이드

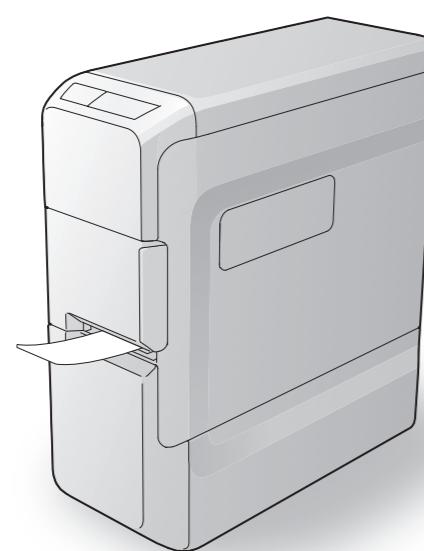

\*413290103\*


①

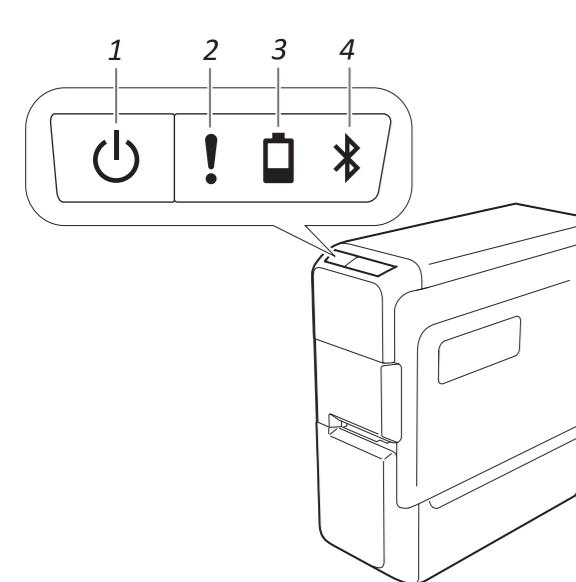


- EN** 1. **The Power button.** Bluetooth is enabled when the power is turned on.  
2. **The error lamp.** When this flashes, fix an error indicated on the connected device.  
3. **The battery lamp.** When this flashes, prepare new AA batteries.  
4. **The Bluetooth lamp.** Indicates the printer's status.
- ID** 1. 電源按鈕。藍芽啟用時藍芽啟用。  
2. 錯誤燈。該燈閃爍時，需改正所連接裝置上顯示的錯誤。  
3. 電池燈。該燈閃爍時，需準備新的AA電池。  
4. 藍芽燈。指示標籤機狀況。
- KO** 1. 푸시버튼. Bluetooth는 전원을 켜면 활성화됩니다.  
2. 오류 표시등. 이 표시등이 깜빡이면 연결된 기기에 표시된 오류를 수정해야 합니다.  
3. 배터리 표시등. 이 표시등이 깜빡이면 새 AA 배터리를 준비하십시오.  
4. Bluetooth 표시등. 프린터의 상태를 나타냅니다.
- TH** 1. ปุ่มเปิดปิด Bluetooth จะเปิดใช้งาน เมื่อเปิดเครื่อง  
2. ไฟแสดงข้อผิดพลาด เมื่อไฟห้าม桔 ให้แก้ไขข้อผิดพลาดบนอุปกรณ์ที่เชื่อมต่อ  
3. ไฟแบตเตอรี่ เมื่อไฟห้าม桔 ให้เปลี่ยนถ่าน AA ใหม่  
4. ไฟ Bluetooth และสถานะของเครื่องพิมพ์




<http://www.epson-biz.com/?prd=lw-c410&inf=manual>

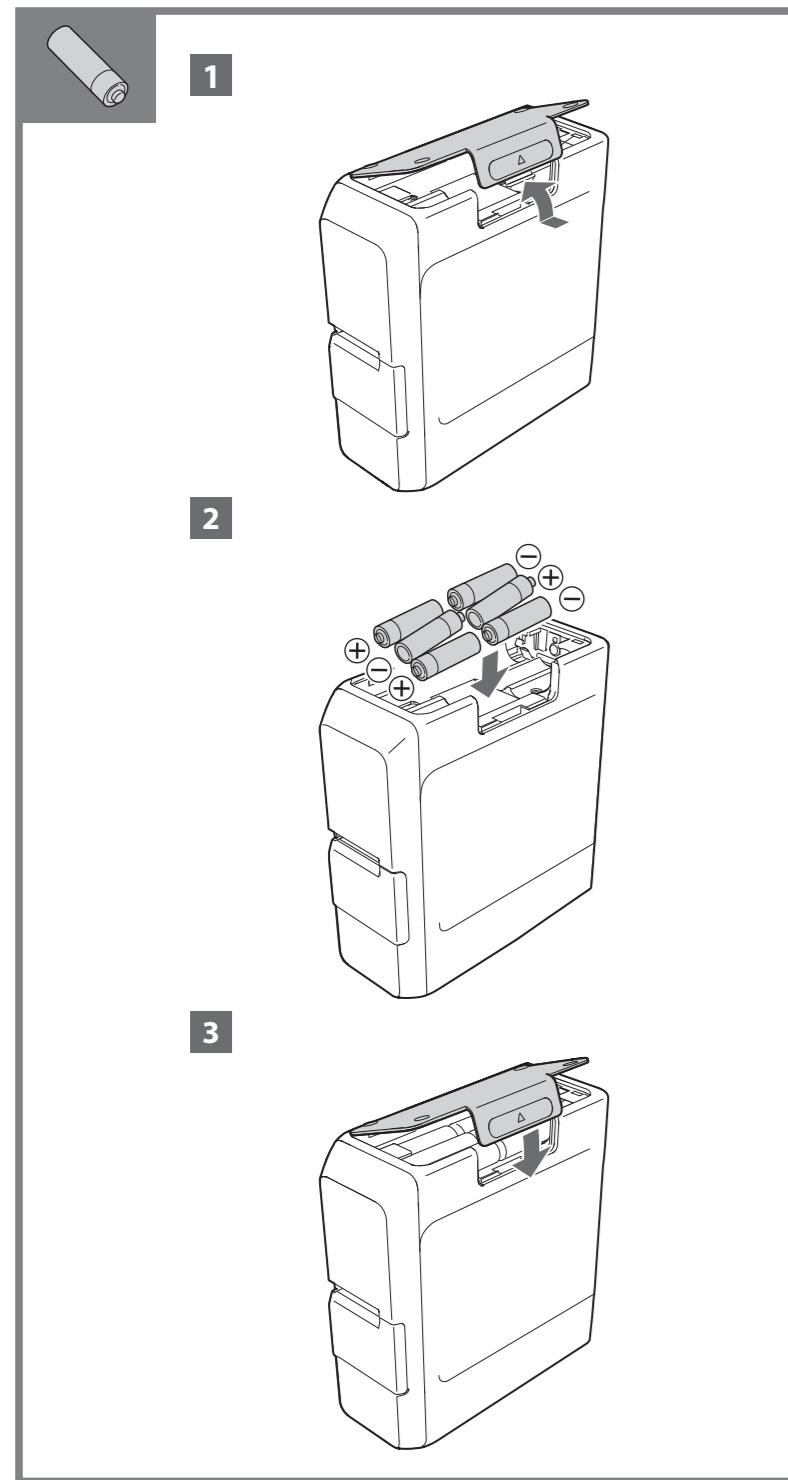


1

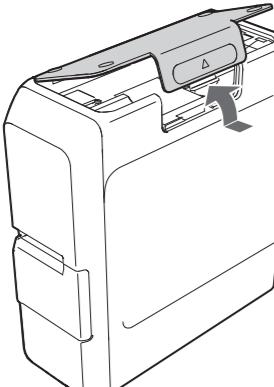


2

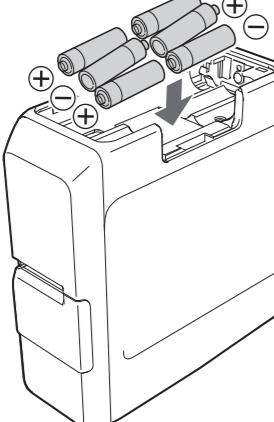


3

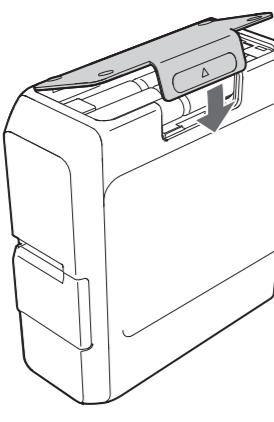




1

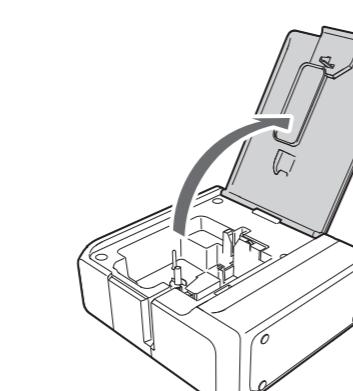

2

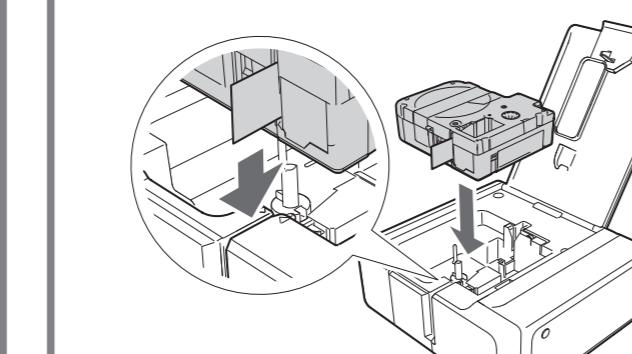


3

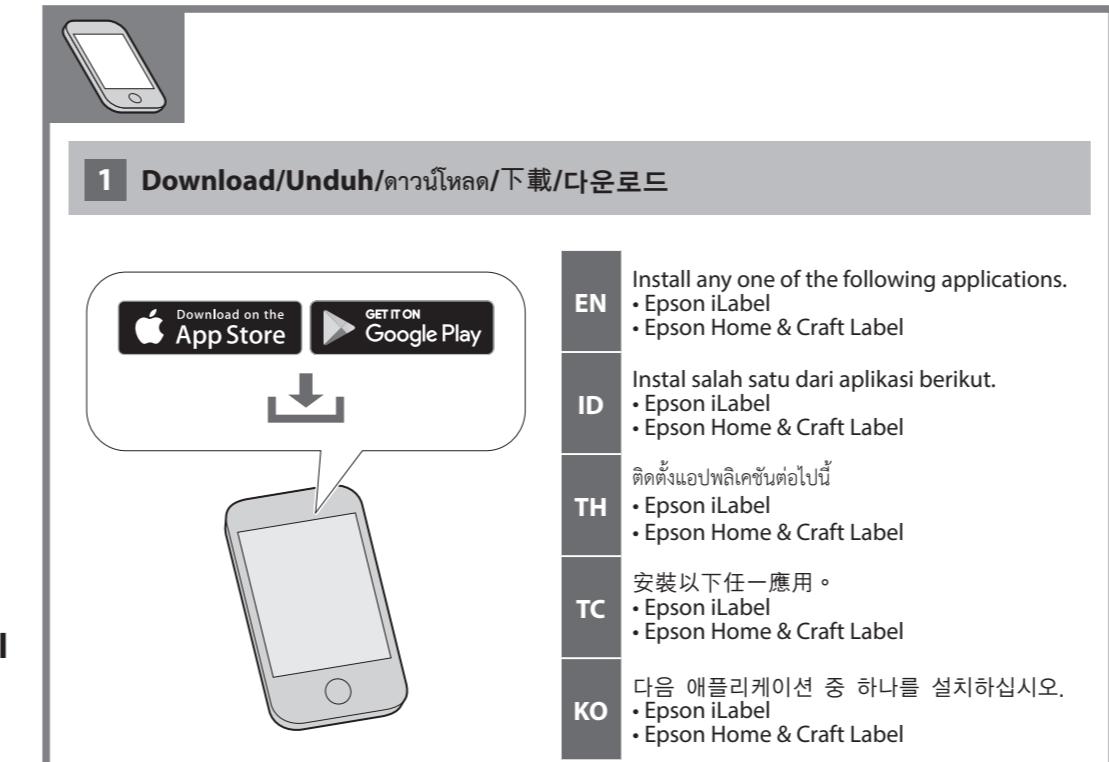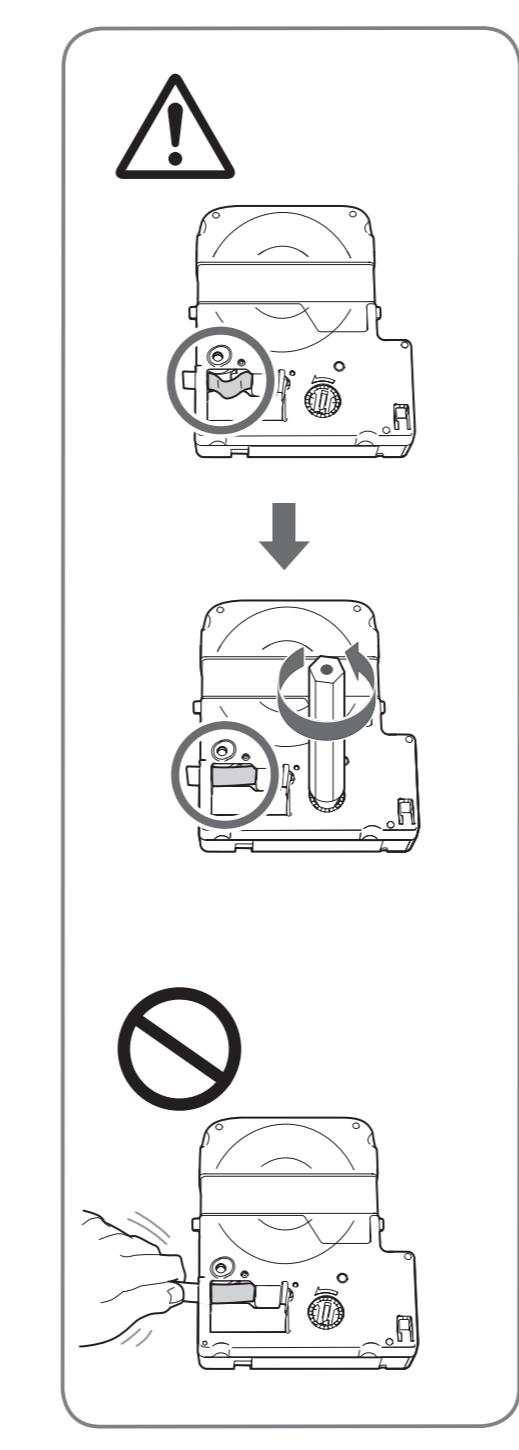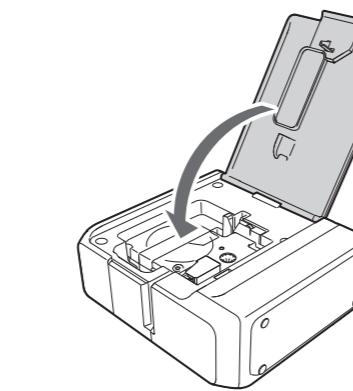

### 1 Download/Unduh/ดาวน์โหลด/下载/다운로드




- EN** Install any one of the following applications.  
• Epson iLabel  
• Epson Home & Craft Label
- ID** Instal salah satu dari aplikasi berikut.  
• Epson iLabel  
• Epson Home & Craft Label
- TH** ติดตั้งแอปพลิเคชันดังนี้  
• Epson iLabel  
• Epson Home & Craft Label
- TC** 安裝以下任一應用。  
• Epson iLabel  
• Epson Home & Craft Label
- KO** 다음 애플리케이션 중 하나를 설치하십시오.  
• Epson iLabel  
• Epson Home & Craft Label

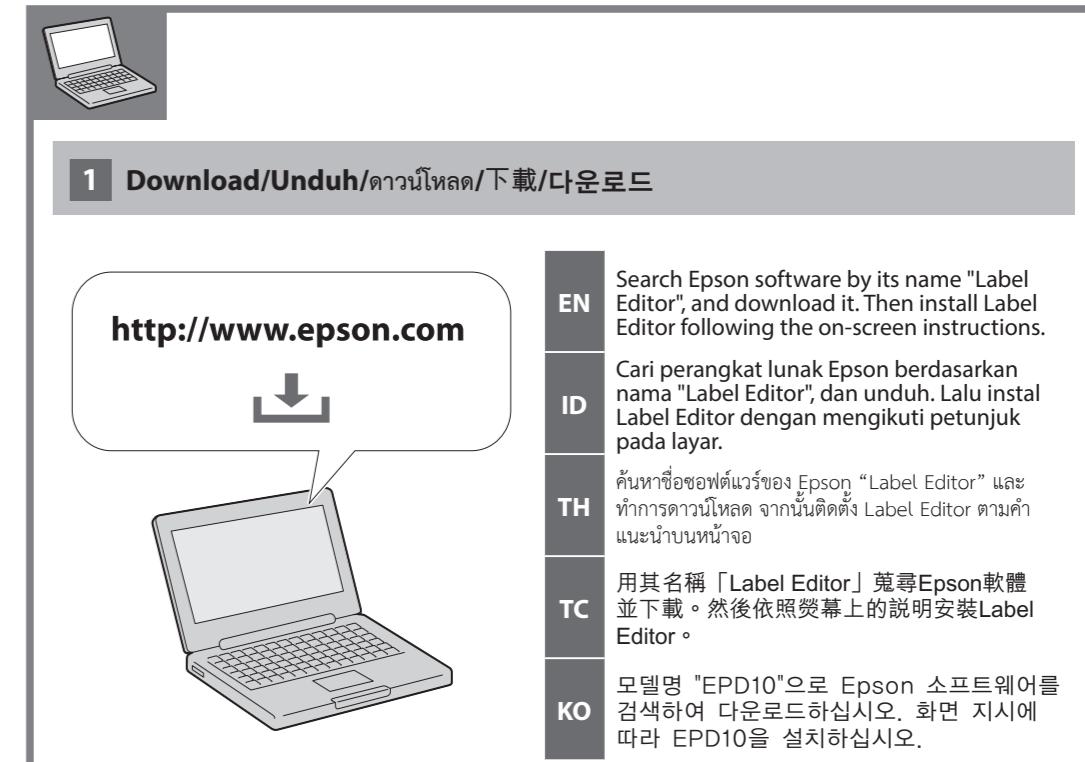



### 1 Download/Unduh/ดาวน์โหลด/下载/다운로드






- EN** Search Epson software by its name "Label Editor", and download it. Then install Label Editor following the on-screen instructions.
- ID** Cari perangkat lunak Epson berdasarkan nama "Label Editor", dan unduh. Lalu instal Label Editor dengan mengikuti petunjuk pada layar.
- TH** ค้นหาซอฟต์แวร์ของ Epson "Label Editor" และดาวน์โหลด แล้วติดตั้ง Label Editor ตามคำแนะนำบนหน้าจอ
- TC** 用其名稱「Label Editor」蒐尋Epson軟體並下載。然後依照螢幕上的說明安裝Label Editor。
- KO** 모델명 "EPD10"으로 Epson 소프트웨어를 검색하여 다운로드하십시오. 화면 지시에 따라 EPD10을 설치하십시오.

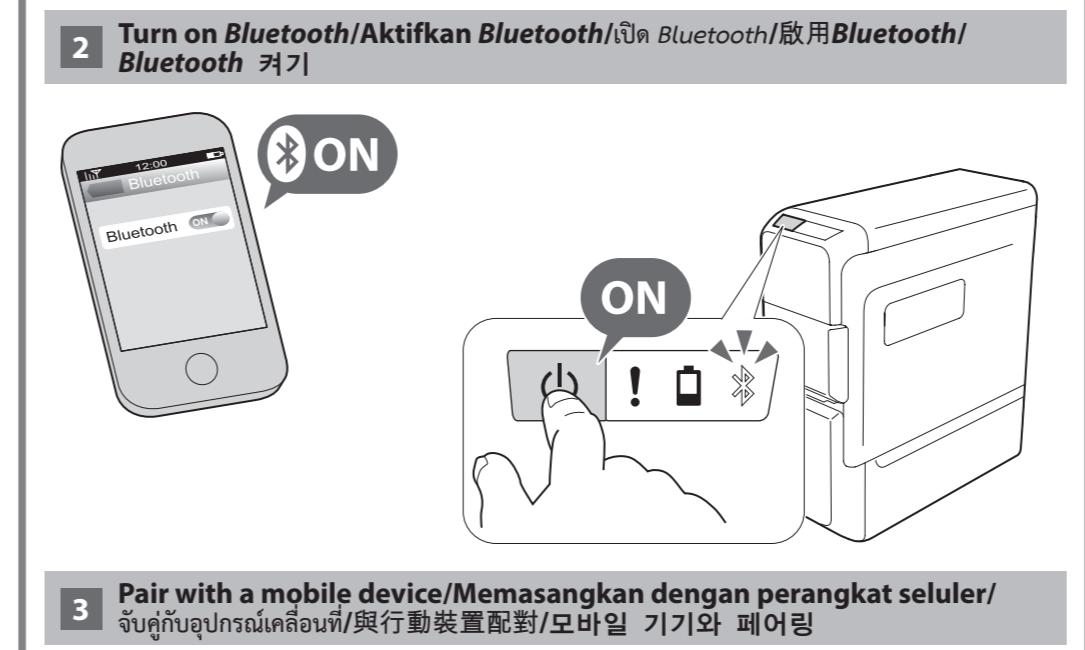


### 2 Turn on Bluetooth/Aktifkan Bluetooth/เปิด Bluetooth/啟用Bluetooth/ Bluetooth 켜기

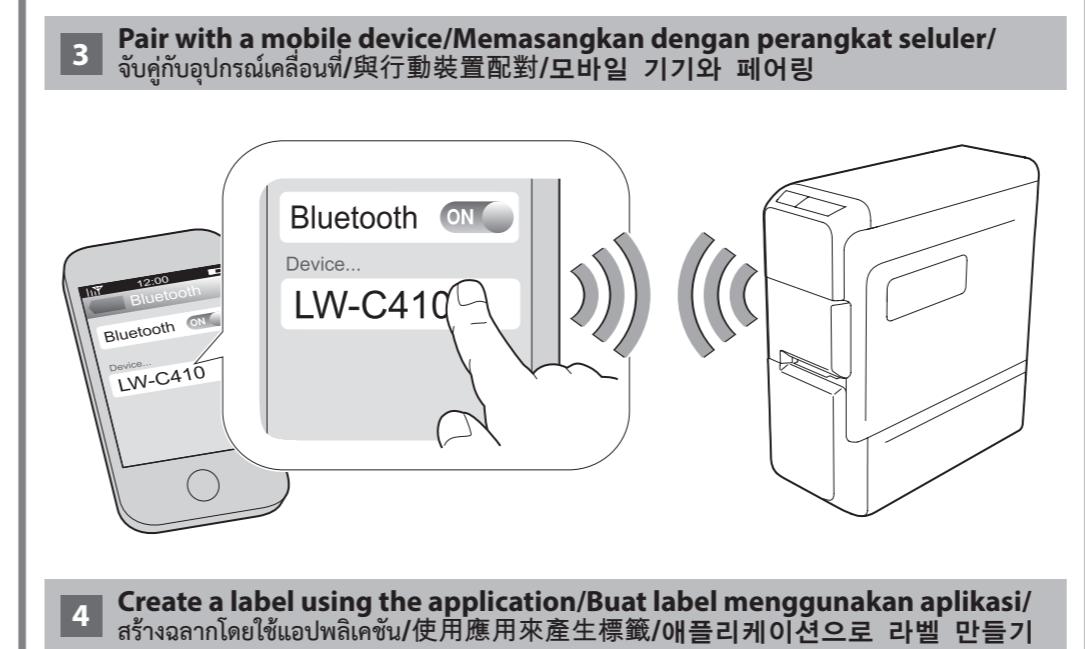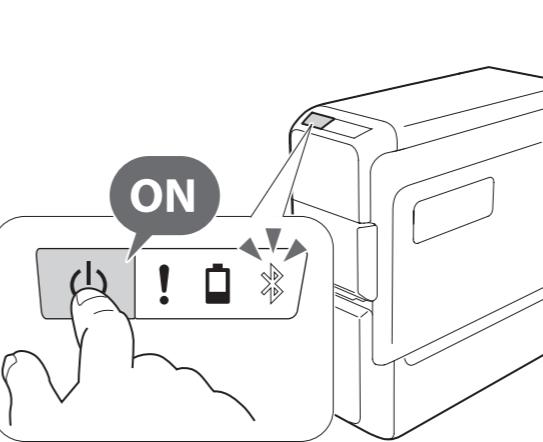



### 3 Pair with a mobile device/Memasangkan dengan perangkat seluler/ จับคู่กับอุปกรณ์เคลื่อนที่/與行動裝置配對/모바일 기기와 페어링

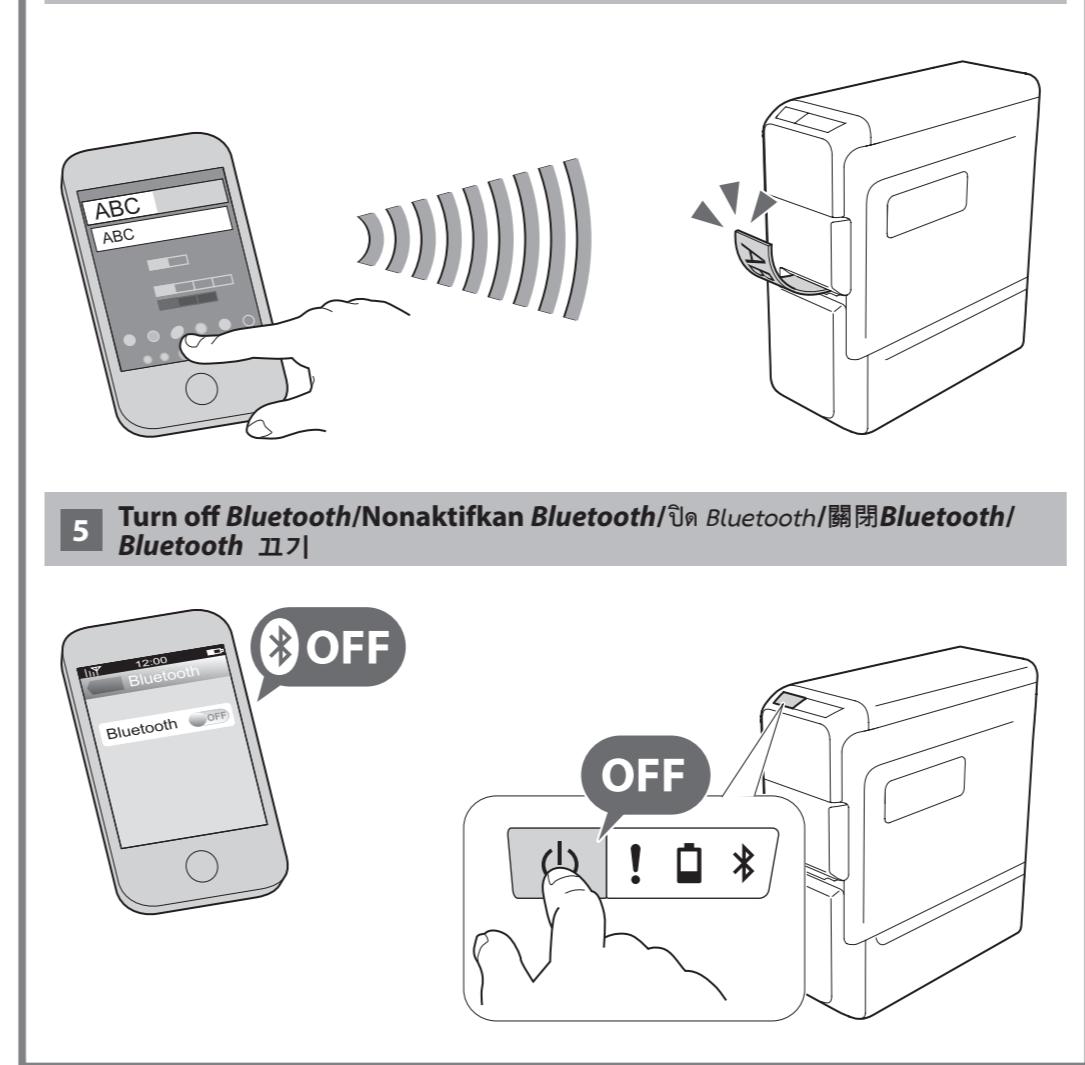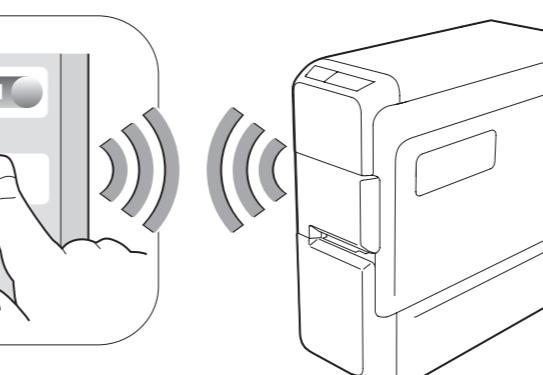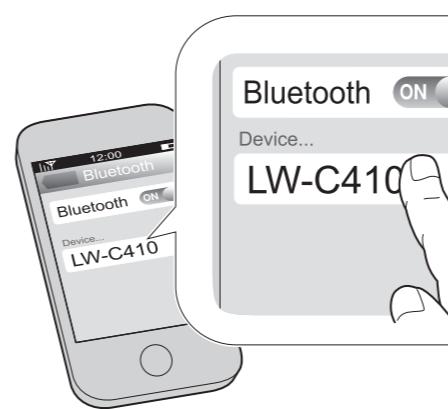

### 4 Create a label using the application/Buat label menggunakan aplikasi/ สร้างฉลากโดยใช้แอปพลิเคชัน/使用應用來產生標籤/애플리케이션으로 라벨 만들기

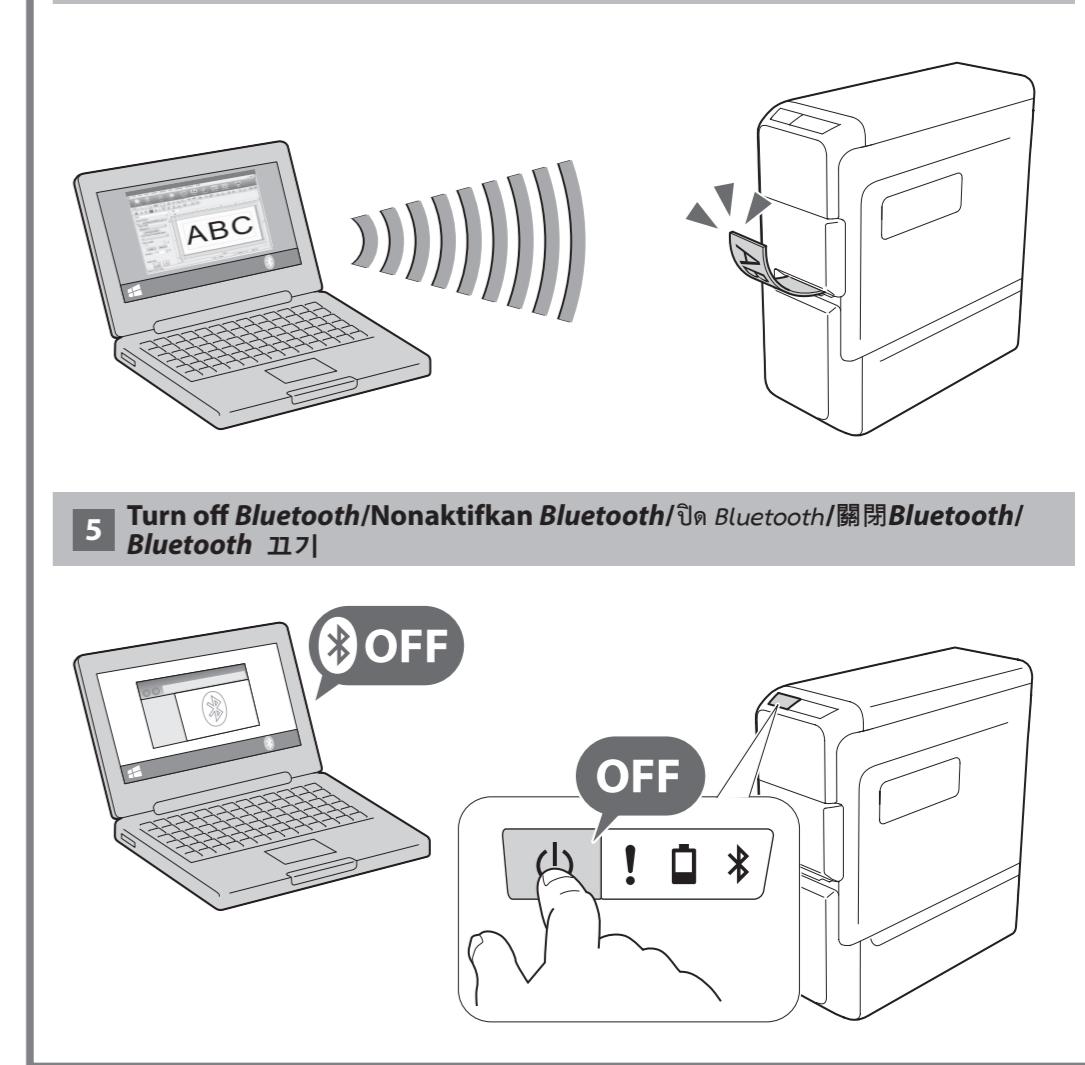

### 5 Turn off Bluetooth/Nonaktifkan Bluetooth/ปิด Bluetooth/關閉Bluetooth/ Bluetooth 끄기

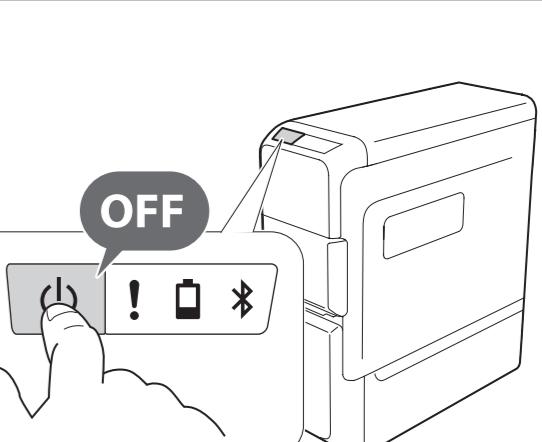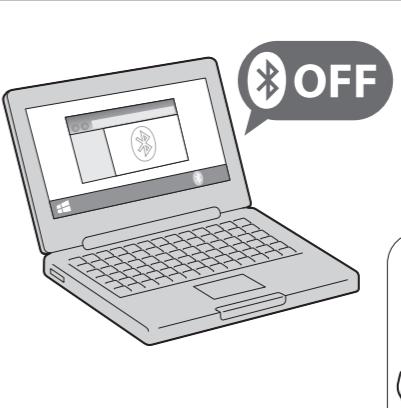

## Important Safety Information / Informasi Keselamatan Penting / શરૂઆતી કાર્મા પ્રકોપક તીવ્રતા / 重要安全資訊 / 중요 안전 정보

### English

For your safety, read the attached documents carefully to use this product correctly.

### DANGER

This symbol indicates information that, if ignored, could possibly result in serious or fatal personal injury. Take extra caution in performing procedures with DANGER headings.

### WARNING

This symbol indicates information that, if ignored, could possibly result in serious personal injury or even death due to incorrect handling.

### CAUTION

This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

### DANGER

#### When handling batteries

If liquid leaking from an alkaline battery gets into your eyes, do not rub your eyes but immediately wash them well with clean water and contact a doctor. Otherwise, it may cause blindness.

### WARNING

This symbol indicates information that, if swallowed, they are extremely dangerous if swallowed. Contact a doctor immediately if swallowed.

#### When using this product

Do not apply any strong force or shocks to the product such as standing on, dropping or hitting it. Otherwise, the product may be broken, which may result in fire or electric shock. If it is damaged, turn off the power immediately, remove the batteries, and then contact the EPSON customer support centre. Continuous use may result in fire or electric shock.

Take care not to spill any beverage such as tea, coffee or juice onto the product, or to spray aerosol insecticide. It may cause malfunction, fire, or electric shock. If any liquid has been spilled on the product, turn off the power, remove the batteries immediately, and then contact the EPSON customer support centre. Continuous use may result in fire or electric shock.

Do not touch the printhead because it becomes very hot. Otherwise, there is a risk of burns.

Do not open any covers other than the tape cartridge cover and the battery cover. Doing so may result in fire or electric shock. Always use the product as instructed in this manual. Otherwise, damage or injury may occur.

If any of the following abnormalities is observed, turn off the power immediately, remove the batteries, and then contact the EPSON customer support centre.

\* If smoke, strange odours or unexpected noises come from the product.

\* If liquid or foreign objects get inside the product.

\* If the product has been dropped or damaged.

May exert electromagnetic interference on, and cause malfunction of, cardiac pacemakers. Before using this product, check that there is no one in the vicinity using a cardiac pacemaker.

May exert electromagnetic interference on, and cause malfunction of, sensitive medical equipment. Before using this product, check that there is no sensitive medical equipment in the vicinity.

Use of this product on aircraft may be restricted in some countries. Before using this product, check that use of this product is not restricted on the aircraft.

**When handling the auto cutter**

Do not touch the tape outlet slot (where the labels come out) during printing or when the auto cutter is in operation. Otherwise, there is a risk of injury.

**Others**

Do not use or store the product, batteries, or tape cartridges in the following places:

\* In direct sunlight.

\* Where it may become extremely hot such as in a vehicle with the windows closed.

\* Where it may become extremely hot such as near a heater or the temperature becomes very unstable such as near the exhaust duct of an air conditioner.

\* Where the product may get wet due to a shower or rain such as in a bathroom or outdoors.

\* In a dusty place or where the product may be exposed to smoke or steam such as near the kitchen or a humidifier.

\* On an unstable place such as on a shaky table or on an inclined place.

\* Where it might be subjected to vibration or shock.

\* Near high-voltage power lines or something that generates a magnetic field.

Keep the plastic bags used to contain the product or this manual out of reach of children. Children may suffocate if they swallow them or put their heads into the bags.

### PERINGATAN

#### Saat menangkan baterai

Jauhkan baterai dari jangkauan anak-anak. Baterai sangat berbahaya bila tertelan. Segera hubungi dokter bila baterai tertelan.

**CAUTION**

#### When handling batteries

Jika liquid lepas dari sebuah baterai, basuh dengan kain dan gantungnya di atas wadah plastik. Gantungnya di atas wadah plastik dan buangnya ke dalam wadah plastik. Jangan mengambilnya dengan tangan.

Jika baterai yang tidak benar digunakan, dapat menyebabkan kerusakan, kebakaran, atau ledakan.

Jangan cabut baterai bila tidak ada lagi daya yang tersisa pada baterai tersebut.

Cabut baterai bila Anda tidak menggunakan produk dalam jangka waktu yang lama.

Jangan memasangkan baterai atau membunganya ke dalam api atau air.

Jangan menjepit baterai dengan pinset logam atau menggunakan benda logam berujung tajam seperti ujung pena atau pulpen saat mencabut baterai.

Saat membungkung baterai bekas, pastikan untuk mematuhinya.

**Saat menggunakan produk ini**

Jangan memberi tekanan yang kuat atau bentukan pada produk seperti berdiri di atasnya, menjatuhkan atau membenturkan produk, jika tidak, produk mungkin saja rusak, dan bisa mengakibatkan kebakaran atau ledakan.

Jangan cabut baterai bila tidak ada lagi daya yang tersisa pada baterai tersebut.

Cabut baterai bila Anda tidak menggunakan produk dalam jangka waktu yang lama.

Jangan memasangkan baterai atau membunganya ke dalam api atau air.

Jangan menjepit baterai dengan pinset logam atau menggunakan benda logam berujung tajam seperti ujung pena atau pulpen saat mencabut baterai.

Saat menggunakan produk ini

Jangan berdiri di atas produk atau menempatkannya di tempat yang tidak stabil, seperti di atas meja yang bergoyang atau tempat yang miring. Jika tidak, produk bisa jatuh dan menyebabkan cedera.

Jangan membungkus penutup pada produk ini.

Jangan mengambilnya dengan tangan.

Jangan mengambilnya dengan tangan.