EPSON STYLUS™ CX7300 / CX8300 Series

Start Here

1. Unpacking

Note:
Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.

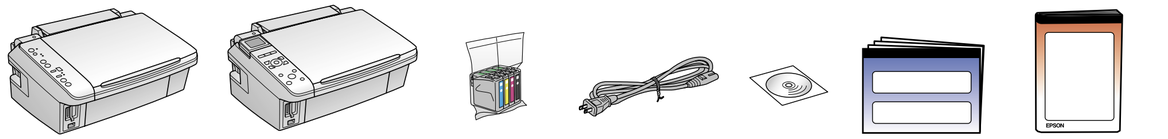

Stylus CX7300 | Stylus CX8300 | Ink Cartridges | Power Cord | CD-ROM | Start Here | Basic Operation Guide

2. Turning On

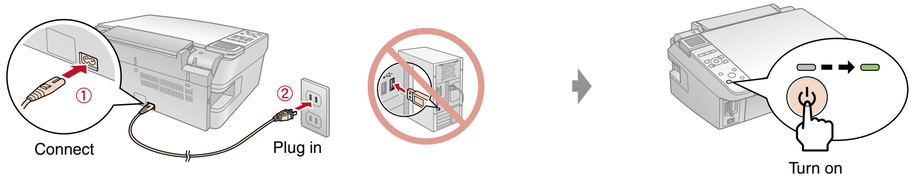

Connect | Plug in | Turn on

3. Selecting a Language (For Stylus CX8300 only)

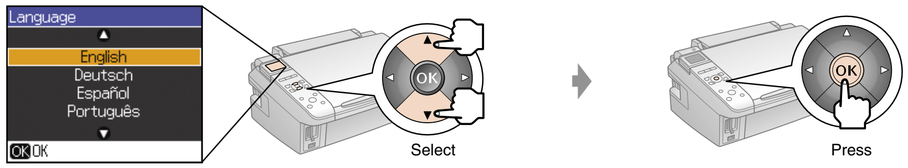

Select | Press

4. Installing Ink Cartridges

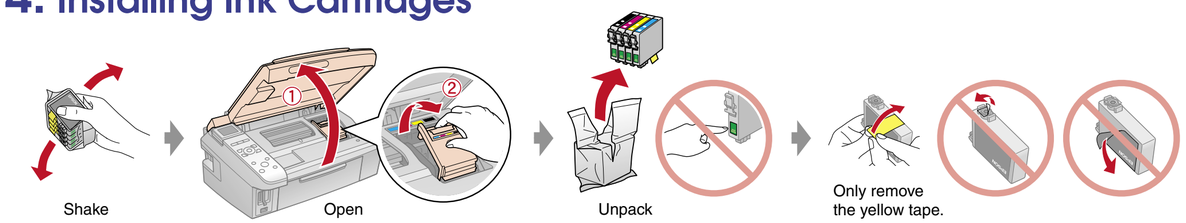

Shake | Open | Unpack | Only remove the yellow tape.

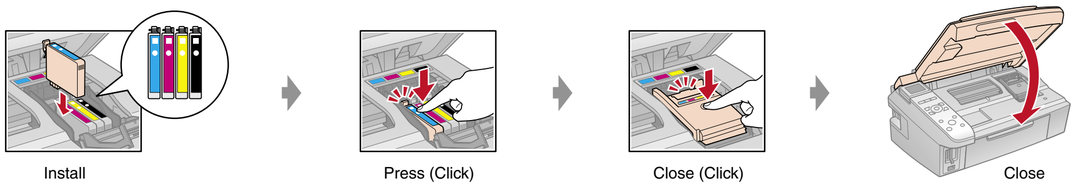

Install | Press (Click) | Close (Click) | Close

5. Ink Charging

Note:
The ink cartridges first installed in your printer will be partly used to charge the print head.
These cartridges print fewer pages compared to subsequent ink cartridges.

Stylus CX7300

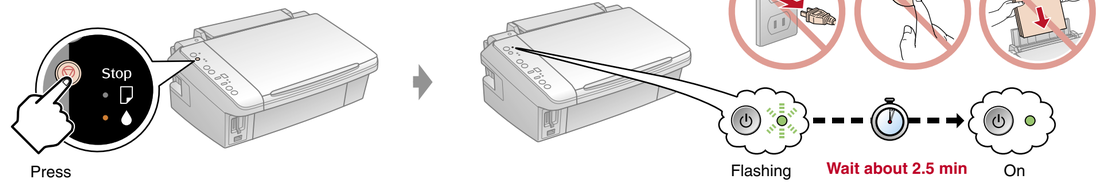

Press | Flashing | Wait about 2.5 min | On

Stylus CX8300

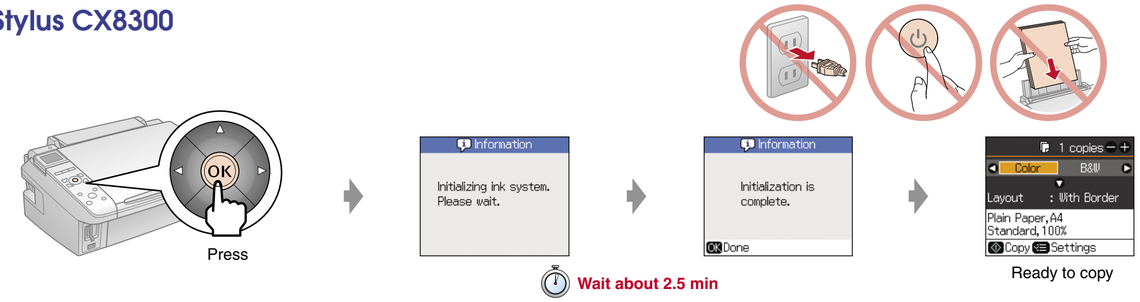

Press | Wait about 2.5 min | Ready to copy

6. Installing the Software

Do not connect the USB cable until you are instructed to do so.

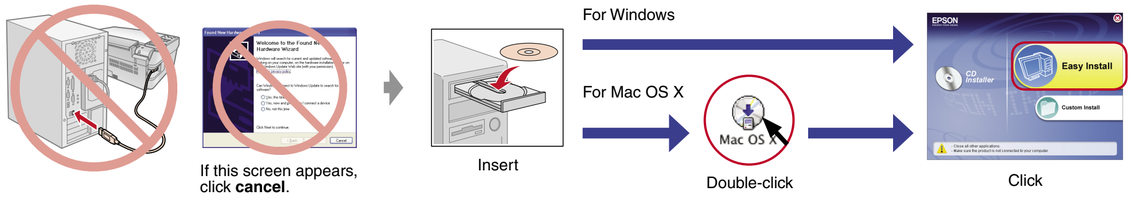

If this screen appears, click **cancel**. | Insert | For Windows | For Mac OS X | Double-click | Click

❑ For Windows. No installation screen? ➜ Double-click the CD-ROM icon.

Follow the instructions.

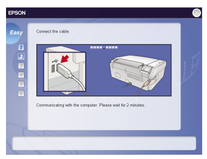

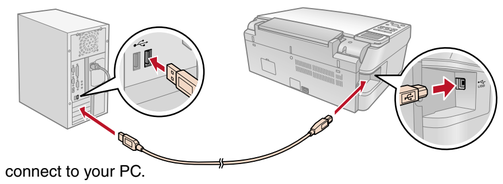

When this screen appears, connect to your PC.

Follow the instructions.

Installation complete.

410952700

Copyright © 2007 Seiko Epson Corporation. All rights reserved.
Printed in XXXXXX XX.XX-XX XXX

ENERGY STAR

Turn over

Loading Paper

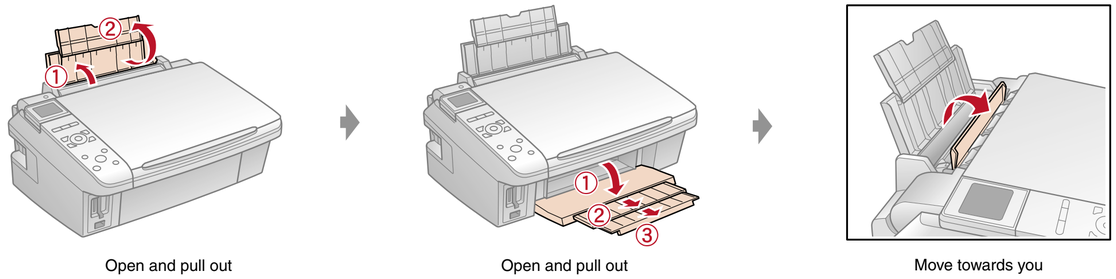

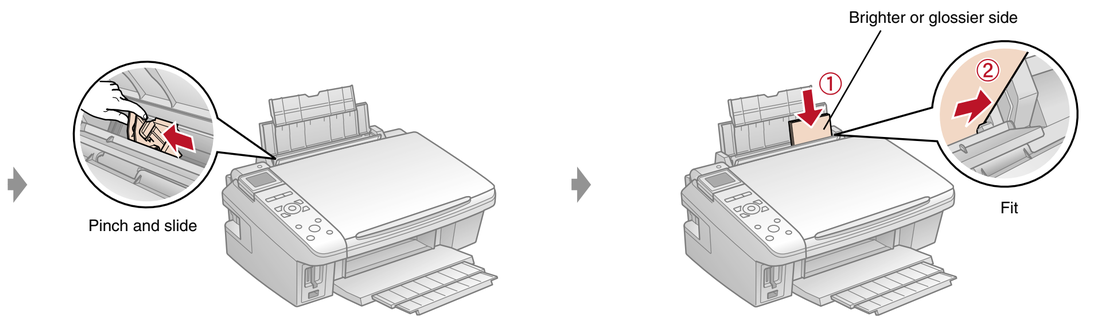

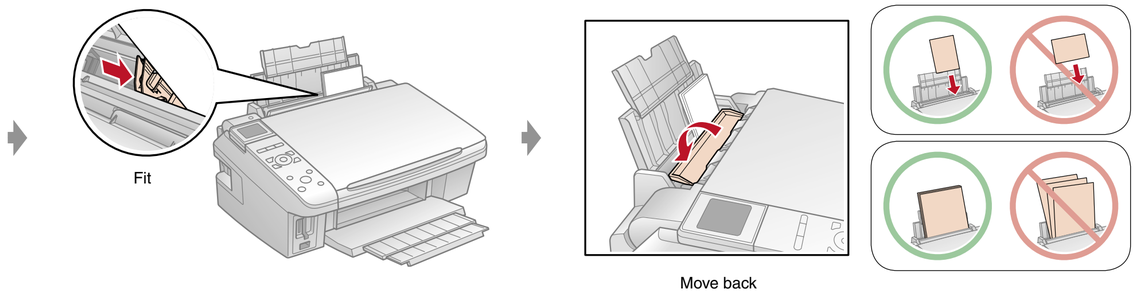

Placing an Original

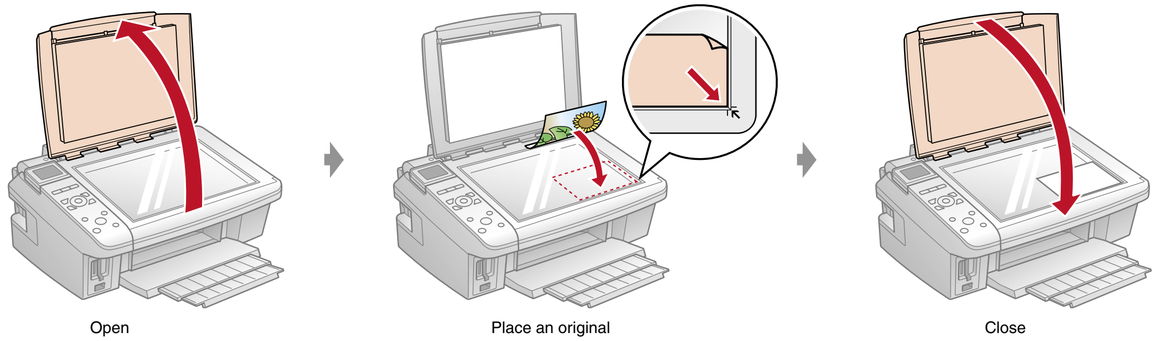
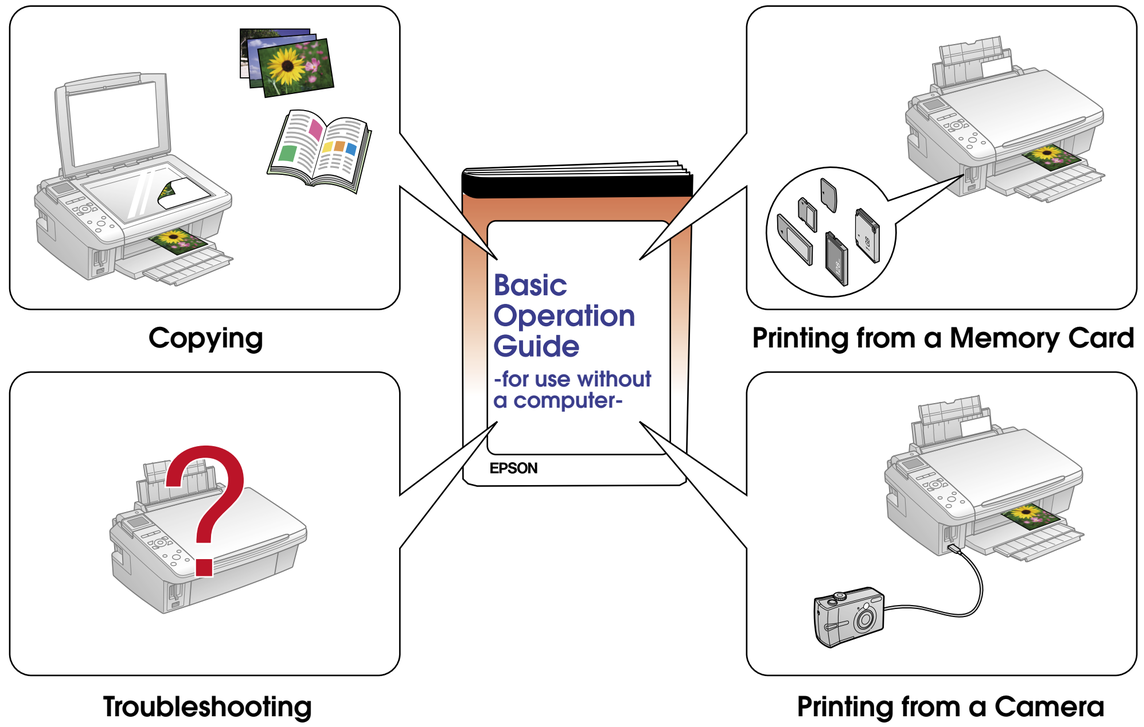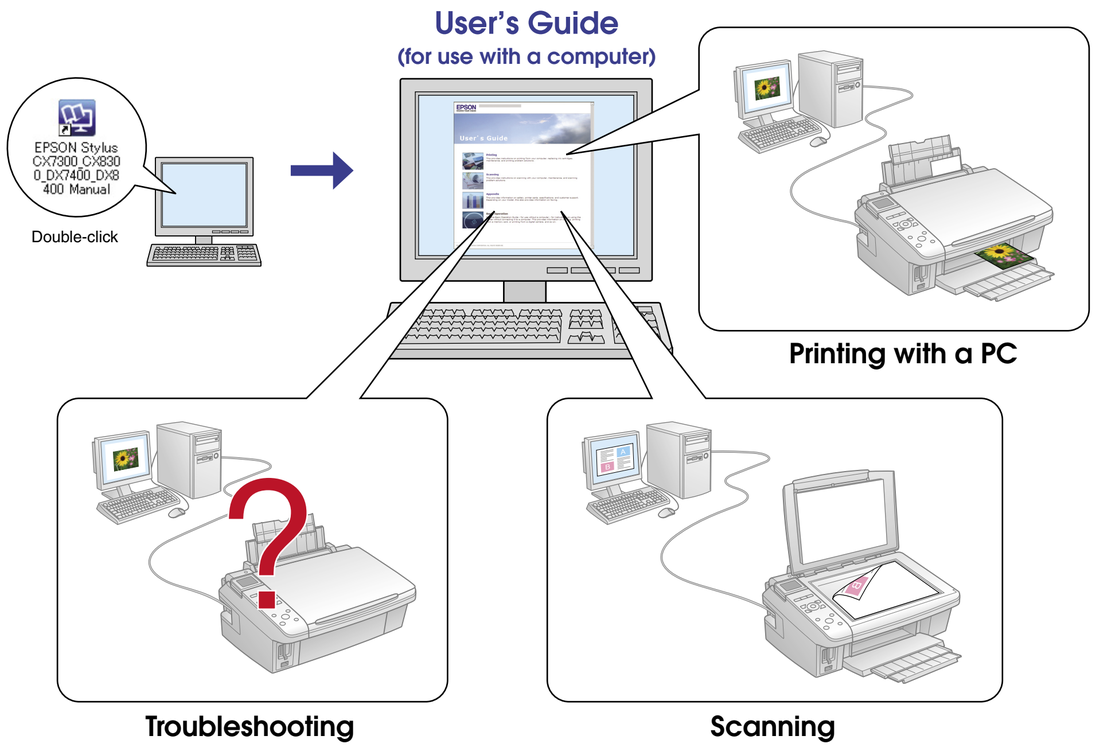
Getting More Information